

## MINI UHF series

**ID211**

Mini UHF Jack To TNC Plug



**ID212**

Mini UHF Plug To BNC Jack



**ID213**

Mini UHF Plug To BNC Jack Right Angle



**ID214**

Mini UHF Plug To Jack Right Angle



**ID215**

Mini UHF Plug To TNC Jack



**ID216**

SMA Plug To Mini UHF Jack



**ID217**

Mini UHF Plug To UHF Jack



**ID218**

Mini UHF Plug To N Jack



**ID219**

Mini UHF Jack To N Plug



**ID220**

Mini UHF Jack To UHF Plug



**ID221**

Mini UHF Plug To N Plug



## BNC series

**ID222**

BNC male crimp for RG316-RG174- RG179



**ID223**

BNC male for RG142- RG58 LMR195



**ID223B-LMR240**  
**ID223C-LMR400**

**ID224**

BNC R/A male for Rg58 RG223 LMR195



**ID224B-LMR240**

**ID225**

BNC male clamp for LMR240



**ID226**

BNC clamp male for LMR195 LMR200



**ID227**

BNC male clamp for LMR400/ RG213/RG214



**ID228**

BNC male for SYV75-2-1



**ID229**

BNC male to BNC male



**ID230**

BNC solder male bulkhead receptacle



**ID231**

BNC panel solder male flange mount



## BNC series

**ID232**  
BNC male Cap



**ID233: BNC FEMALE**  
**ID233B: RG58/LMR195**  
**ID233C: LMR240**  
**ID233D: LMR400**



**ID234**  
BNC B/H female for  
RG174



**ID235**  
BNC B/H female for  
RG316



**ID236**  
BNC panel for LMR100



**ID237**  
BNC female damo  
for RG59



**ID238**  
BNC panel clamp for  
RG142



**ID239**  
BNC B/H solder-2



**ID240**  
BNC B/H solder-1



**ID241**  
BNC female for PCB



## BNC series

**ID242**  
BNC R/A female  
for PCB



**ID243**  
BNC R/A female for  
PCB-2



**ID244**  
BNC panel solder



**ID245**  
BNC panel solder-2



**ID246**  
BNC Female to  
female



**ID247**  
BNC bulkhead female  
to female



**ID248**  
BNC 3x female T type



**ID249**  
BNC female RA for PCB



**ID250**  
BNC female to female  
adapter 2



**ID251**  
Bnc right angle  
male damp RG58/  
LMR195

