

AIR DRYER Delair® EtsilineCommPact

FORM. NO.: ACMM16WC0002 Rev 2 REVISION: 01-11-2018
ART. NO.: 0281583

READ AND UNDERSTAND THIS MANUAL PRIOR TO OPERATING OR SERVICING THIS PRODUCT.



Delair® EtsilineCommPact

Revision History

Revision survey document	Purpose of release	Date	Drw./Appr./Qc.
Rev 0.0	Released	January 2017	HdG/EvL/ES
Rev 1	Released	February 2018	TM/EvL/ES
Rev 2	Released	November 2018	TM/EvL

1. Table of Contents

Revision History	2
1. Table of Contents	3
2. Introduction	5
General	5
Purpose of the manual	5
Contact address	5
Helpline:	5
Symbols and conventions	5
Identification	6
Abbreviations	7
Safety Information	7
Markings and symbols	7
General	8
Electricity	8
Safety precautions	8
Environmental aspects	9
Approvals	9
Safety and electromagnetic compatibility	9
3. Technical data	11
General	11
Overall weight and dimensions	11
Components – overview of the equipment	11
Parts supplied with option 0281544	12
Parts supplied with mounting options 0281565	13
Control system	13
Purpose of the equipment	13
Location of equipment	14
Environment	14
Space requirements	14
Ventilation Requirement	14
Inlet air quality	14
Electrical Requirements	14
4. Functional Description	15
Drying	15
Regeneration	16
Cycle	16
Remote Sense	17
5. Installation	19
Receiving and unpacking	19
Short Shipment or Incorrect Material Claims	19

Shipping Damage Claims	19
Connecting to the system	19
Tubing	20
Electrical installation	20
6. Operating instructions	21
Control panel	21
Connections and fuse	23
Before start-up	25
Starting	25
Stopping	25
Power failure	25
Internet interface	26
Log-ON	26
Homepage	28
System info	29
General	29
Network	30
Credentials	31
Configuration	33
Device	33
Operation	34
Alarms	35
Event log	36
Remote Sense	37
SNMP	38
Time & Date	38
Soft reset	39
Test status	39
Parameter settings	40
IP-address/#/config/installer	45
ETSI Installer Firewall Permissions	46
SNMP Communication	48
7. Trouble shooting	61
8. Spare parts	63
9. Process & Instrumentation diagram	65
10. Electrical control plan	67
11. MSDS-SHEETS	69
12. Declaration of conformity	77
13. Helpline	79

2. Introduction

General

The EtsilineCommPact is an air dryer with compact dimensions, especially designed to be mounted in a 19"-or ETSI-rack. Little or no maintenance is required to operate this unit. The unit can be connected to the internet, to read out operation and/or modify settings.

Purpose of the manual

This manual covers full performance data applicable to the air dryer to instruct you in the correct and safe operational use. To ensure proper setup and use of your air dryer please read all documentation carefully before bringing the air dryer into operational use.

While our dryers are designed for ease of use, the dryer service information contained in this manual will help to ensure reliable and long-term operation.

NOTE : It is essential that the service instructions be followed to guarantee reliability.

Contact address



Address: Munnikenheiweg 41
4879 NE ETTEN-LEUR
The Netherlands


Helpline:

Phone: +31 76 5085568
Fax: +31 76 5085590
E-mail: info.nl@spxflow.com
Website: www.spxflow.com

Symbols and conventions

Throughout this user manual, information relevant to safety issues and general warnings/notices are clearly marked with the symbol and laid out as follow:

	SAFETY FIRST
<p>This symbol is used throughout this manual and on labels on the installation itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to assemble or use this unit.</p>	
	WARNING : Hazards or unsafe practices which could result in severe personal injury or death.
CAUTION	: Hazards or unsafe practices which could result in minor personal injury.
IMPORTANT	: Indicates that equipment or property damage could result if instructions are not followed.
NOTE	: Gives helpful information.

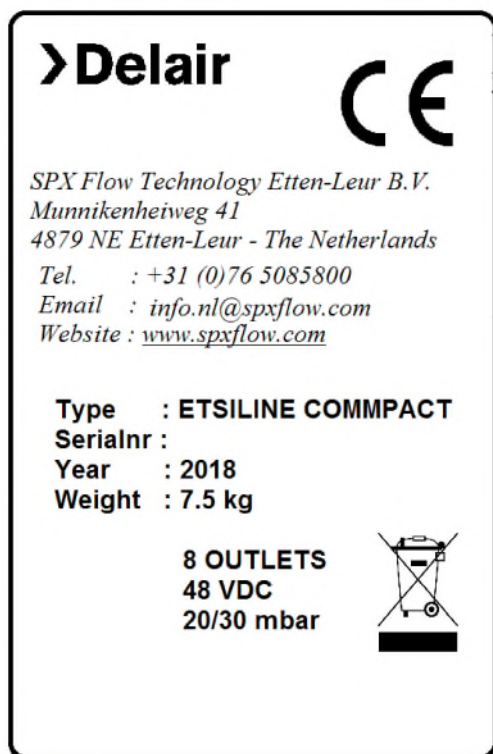

Careful operation is your best insurance against an accident. Read this section carefully before operating the installation. All operators, no matter how much experience they may have had, should read this and other related manuals before operating this unit or any equipment attached to it. It is the owner's obligation to instruct all operators in safe operation.

In addition to these instructions, the local regulations in your country may impose additional requirements that must be observed.

Identification

Each dryer carries an identification plate with minimally the following information;

Name of manufacturer

- 1 Address of manufacturer
- 2 Serial number
- 3 Model + options
- 4 Year of construction
- 5 Electric power
- 6 Max. operating pressure bar(g)
- 7 Reference and dryer revision status

Serial no. validity

Air dryers covered by this manual:

delair® EtsilineCommPact

From serial number: 180600284 and higher



Abbreviations



Abbreviation	Description
AD	Air Dryer
CE	Conformité Européenne
DHCP	Dynamic Host Configuration Protocol
ID	Internal diameter
MIB	Management Information Base
N/A	Not applicable
OD	Outside Diameter
RFC	Request for Comment
RH	Relative Humidity
SNMP	Simple Network Management Protocol
PCB	Printed Circuit Board



Safety Information

Markings and symbols


The following markings and international symbols are used on the equipment or within this manual.

	<p>WARNING</p> <ul style="list-style-type: none"> A warning shows a hazard that can cause death or serious injury. Follow the instructions. 		<p>HOT SURFACE</p> <ul style="list-style-type: none"> Hot surface; beware of burning skin
---	---	---	---

	<p>ELECTRICITY</p> <ul style="list-style-type: none"> High voltage; danger of electric shock 		<p>ENVIRONMENT</p> <ul style="list-style-type: none"> Instructions with respect to the environment
---	--	---	--


	<p>HOT SURFACE</p> <ul style="list-style-type: none"> Hot surface; beware of burning skin 		<p>ENVIRONMENT</p> <ul style="list-style-type: none"> Follow instructions for disposal of equipment
---	---	---	---

Do not operate this equipment until the safety information and instructions in this user guide have been read and understood by all personnel concerned.


	<p>WARNING</p> <ul style="list-style-type: none"> User responsibility. Failure or improper selection or improper use of the products described herein or related items can cause death, personal injury and property damage.
---	--

General


Correct use of the air dryer is important for your personal safety and for trouble-free functioning of the air dryer. Incorrect use can cause damage to the air dryer or can lead to incorrect air supply.

	<p>WARNING</p> <ul style="list-style-type: none">• Read this manual before you start the installation and putting into operation of the air generator. Prevent accidents and damage to this equipment.• Contact your supplier if you detect a problem that you cannot solve with this manual.• Use the air dryer in accordance with its purpose.• Only service-engineers, that are qualified to work on electric and pneumatic equipment, are allowed to do the installation, maintenance and repairs. Unqualified people are not allowed to repair the equipment.• Do not tamper or experiment with the equipment. Do not exceed the technical specifications of the air drier.
---	---

Electricity



	<p>WARNING</p> <ul style="list-style-type: none">• Only service-engineers, that are qualified to work on electric equipment, are allowed to do the installation, maintenance and reparations.• Disconnect the main power supply before you do the maintenance or repair.• If a service-engineer has to work on the air drier while the electric power is connected, the service-engineer must be very careful with respect to the electric hazards.
--	--

Safety precautions

	<p>WARNING</p> <ul style="list-style-type: none">• Make sure that the ventilation rate is sufficient in the room where the air drier is installed.• Keep the ambient temperature for the air drier between -10 and +45 °C.• Install the peripheral equipment and piping/tubing according to standard procedures.• Ensure proper and safe operation.• Make sure that instructions concerning health and safety are compliant with the local legislation and regulations.
---	--

Environmental aspects

The use and maintenance of the air drier does not include environmental dangers. Most parts are made of metal and can be disposed in the regular way. Optimal installation according to instructions and according to good craftsmanship will result in minimal energy consumption and maximal life of your system.

	<p>According to EC-regulations electrical systems have to be disassembled and recycled at the end of their life. SPX Flow technology can support you in this.</p>
	<p>To improve the collection, treatment and recycling of electronics at the end of the life, special requirements may apply to the disposal of this product. Please contact local authorities when disposing this product. SPX Flow technology can support you in this.</p>

<p>IMPORTANT</p>	<p>Make sure that instructions concerning health, safety and environment are compliant with the local legislation and regulations.</p>
-------------------------	--

Approvals

Safety and electromagnetic compatibility

<p>This equipment has been tested and complies with the following European Standards</p>	
<p>Directive for electromagnetic compatibility (EMC)</p>	<p>2014/30/EU EMC Directive</p>
<p>Directive on waste electrical and electronic equipment (WEEE)</p>	<p>2012/19/EU WEEE Directive</p>
	<p>EN ISO 12100:12100</p>
	<p>EN 61000-3-2:2014</p>
	<p>EN 61000-6-1:2007</p>
	<p>EN 61000-6-2:2005</p>
	<p>EN 61000-6-3:2007</p>
	<p>EN 61000-6-4:2007</p>
	<p>NEN-EN-ISO 13857:2008</p>
<p>Quality assurance</p>	<p>ISO 9001:2000</p>

Page left blank intentionally for 2 sided printing purposes

3. Technical data

General

Subject	Value
Operation	Continuous operation
Outlet connections	8 outlets for 6mm ID flexible hose (OD=8mm)
Dry air volume	120 l/h at 20mbar(g)
Working pressure	20-30mbar(g) (default setting)
	Pressure range adjustable within a range of 0 – 100 mbar(g)

Overall weight and dimensions


Mounting	Width (mm)	Depth (mm)	Height (mm)	Weight (kg)
19"-Rack	483	270	87*	10
ETSI-Rack	535	270	87*	10
Wall Mounting (brackets optional)	483	320	87	10+2
Floor/table mounting (brackets optional)	483	320	95	10+2

* Height is 2U (2 units) in 19"- and ETSI-rack

Optionally a power adaptor can be delivered for this unit. It is mounted at the back side of the unit and does not affect above dimensions. Weight will increase with 0,5kgs.


Components – overview of the equipment

The main parts of the Air Dryer are presented below (with power adaptor option 0281544);

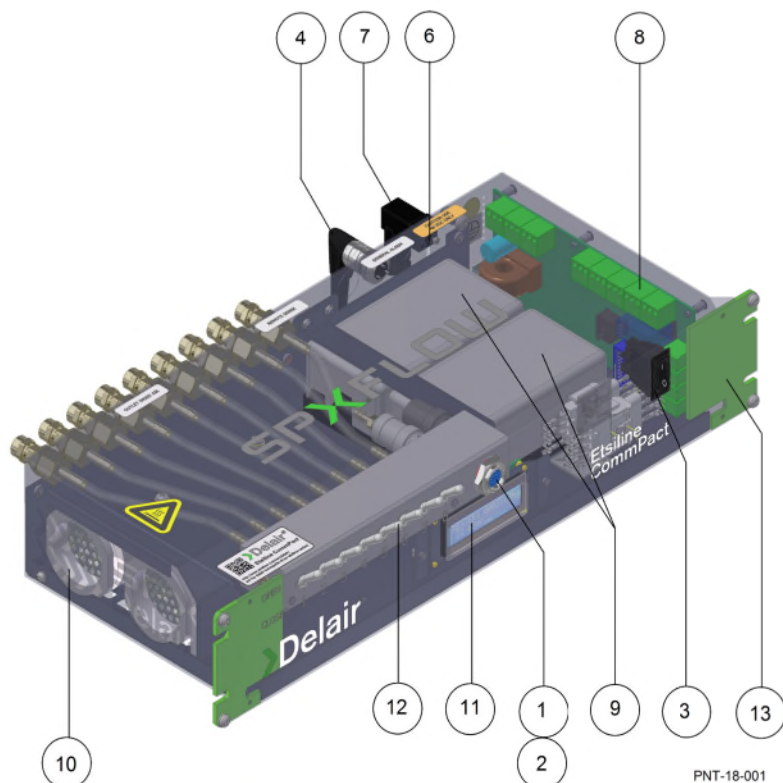


No	Component	Purpose
1	Humidity indicator	Indicates residual moisture through colour change (blue = dry; pink is humid)
2	Gasket for indicator	Sealing to prevent leakage
3	On/off switch	Switching unit ON and OFF
4	Alarm plug	For external signalling
6	Connector power supply	To connect electrical power supply
7	Cable socket	For connector power supply cable
8	Electrical controller	Controlling the unit
9	Air pumps	Increasing (dry) air supply pressure
10	Side grill opening	Opening for air inlet and wet (hot) air outlet
11	Display	Readout operating conditions
12	On-off valves	Valves for opening/closing supply to connections on back-side of the unit
13	Mounting brackets	To fixate unit

Parts supplied with option 0281544

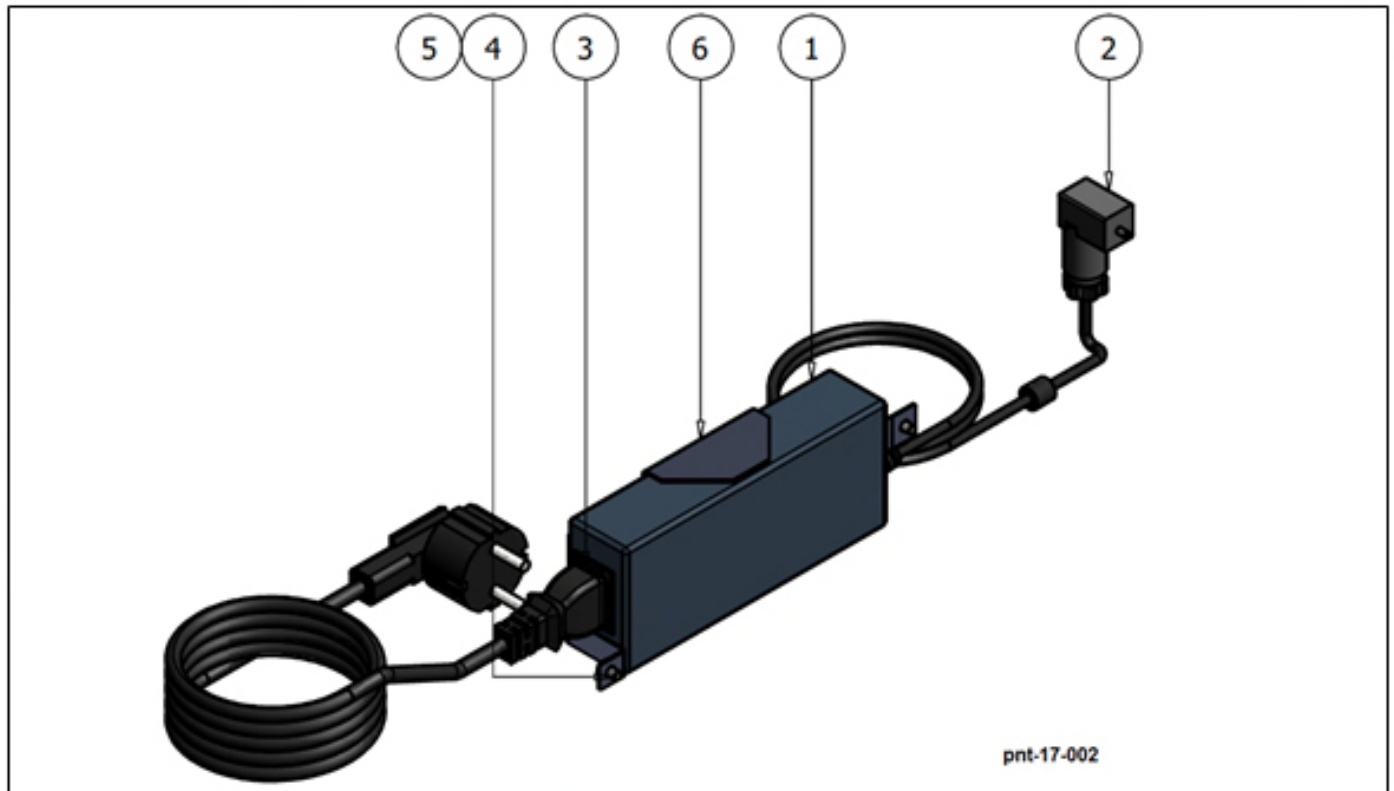

No	Component	Purpose
1	Power adaptor	To convert 90-264Vac/1ph/50-60Hz into 48Vdc
2	Cable socket	Connecting power supply
3	Power cord with euro plug	Connection between adaptor and mains
4	Screw	Fixation M4
5	Washer	Surface protection
6	Bracket	Fixation of adaptor to back side of unit

Parts supplied with mounting options 0281565

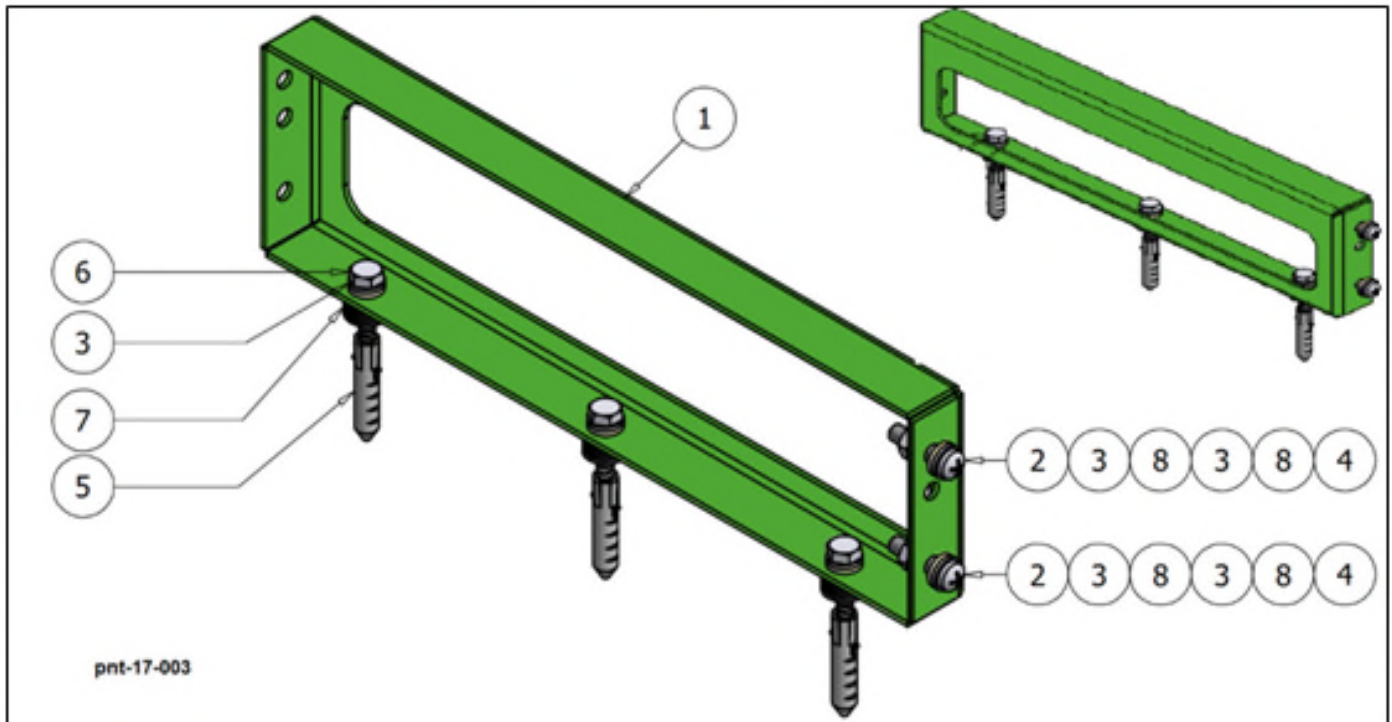

No	Component	Purpose
1	Bracket	For wall and floor mounting
2, 3, 4	Fixation materials	Fixating unit
5	Plug	Fixation in (solid) wall/floor
6	Screw wood	Fixation in (solid) wall/floor
7	Spacer	Create ventilation distance (only for floor mounting)
8	Washer	Surface protection

Control system

For detailed instructions for the controller, please refer to chapter 8 “Controller”.

Purpose of the equipment

The delair® EtsilineCommPact air dryer, is designed to supply dry air to a system and maintain an over-pressure in this system. It can be used in any system in which the presence of water vapour is undesired. Water vapour can enter a system in several ways;

- By diffusion
- The system is often not leak-free.
- Because of temperature changes the system will ‘breathe’.
- In case the temperature further reduces, water vapour may even condensate.

The air dryer is able to continuously supply dry air because it is equipped with two adsorber vessels. While one adsorber vessel is in drying-mode, the other vessel is regenerated. Regeneration means that adsorbed water vapour is removed by heating it, after which the desiccant bed is cooled again.

Location of equipment

The air dryer should be installed in a dry room indoors. Ample free space should be allowed for the maintenance of the device. The air dryer shall be installed on a straight and even surface capable of handling the weight of the unit as specified in the technical specification.

Consult the dimensional drawings for the minimum required distance to walls and other equipment. Make sure the unit is not exposed to direct sunlight exposure.


Environment

Subject	Value
Operating temperature:	-10°C to +45°C
Storage temperature:	-20°C tot +70°C
Relative humidity:	max. 95%
Enclosure:	IP20 according IEC529
Acoustic noise:	≤43dBA at 1m distance and 1,5m height

Space requirements

See paragraph "Overall weight and dimensions"

Ventilation Requirement

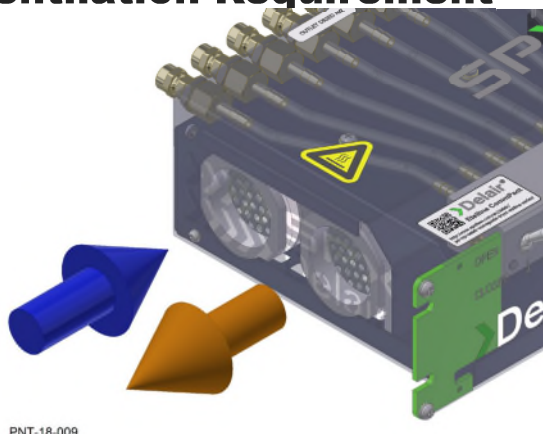

PNT-18-009

The unit has ventilation openings on left, right and bottom side for cooling purposes. However, on the left side (see figure above) ambient air is sucked in, which is dried and delivered to system. At the same time relative warm, humid air exits the unit. Make sure to keep enough distance to neighbouring parts (minimally 20/30mm).

Inlet air quality

Medium

Conditioned clean ambient air

Electrical Requirements

Subject	Value	Remark
Power supply standard	48Vdc (with optional adaptor 0281544)	90-264Vac 50/60Hz)
Max. power consumption	55W	

4. Functional Description

This section gives a brief description of the operational function of the air dryer.


Drying

See the typical process flow diagram in which adsorber (ADS2) is drying and (ADS1) is regeneration. The air to be dried will be sucked by a compressor (M2) through one adsorber (ADS2). The water vapor is adsorbed by the desiccant and the air flows via the compressor (M2) and solenoid valve (Y3) to the system. After pre-set time the two adsorbers will change their function.

The system pressure can be read from the digital display (PI) and remotely as well.

The system pressure is maintained by the pressure transducer (PT) that switches the compressor ON and OFF.

When system pressure drops below minimum, a low pressure alarm will be activated. The pressure transducer is factory set.

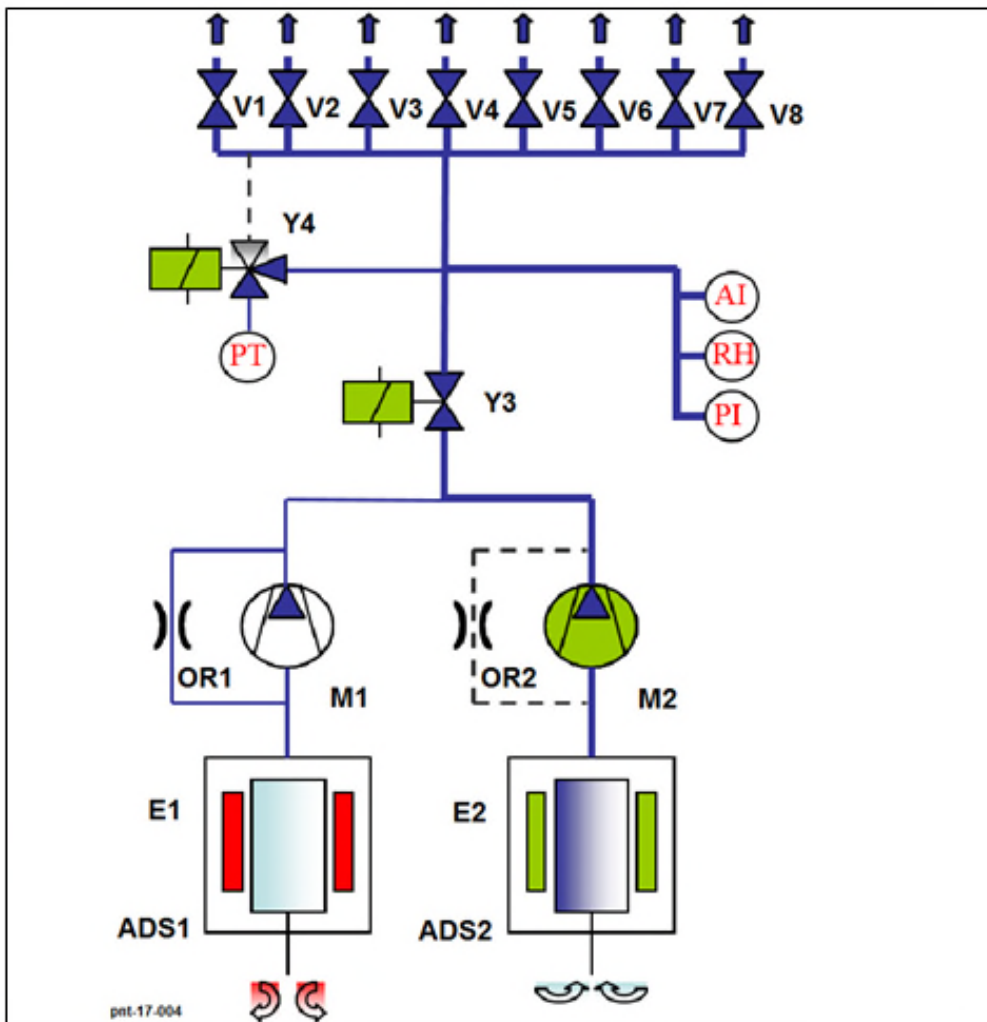

Typical flow diagram

Regeneration

Two phases can be distinguished during the regeneration of the adsorber, the heating phase and the cooling phase.

During the regeneration, a small volume of dried air will be branched from the compressor outlet line and led to the regenerating adsorber. An orifice (OR1) is mounted in this branch to limit the dried air quantity. This purge-air flows through the adsorber which is to be regenerated. During the heating phase the heater (E1) is energized. The heat releases the moisture from the desiccant and the purge air transports the moist air out of the air dryer.

The compressor (M2) will run continuously during the heating phase, however may switch off in the cooling phase. The heating phase is followed by the cooling phase. During this phase, the heater (E1) is switched off. The compressor is operated dependent of system pressure, the cooling phase can be extended, because compressor may switch off because system pressure is above pre-setted value.

After the completion of the cooling phase, the adsorber is ready to be used for drying.

The drying, heating and cooling process is monitored and stored in the controller.

The controller on the printed circuit board will, even when the mains power is lost or switched off, remember the remaining drying time of the cylinder and continue the drying cycle after switching on the power again.

Cycle

The cycle time of the dryer is 12 hours. Cycle time is defined as the sum of the drying time and the time to remove the water from the adsorber and cool it down. The dryer is continuously operating. However, if pressure in system is above set pressure and the heating phase is finished, the compressor may stop.


The following steps can be distinguished within a cycle:

Seq.	Adsorber 1	Adsorber 2	Time
1	Drying	Heating	3 hrs
2		Cooling	≥ 3 hrs
4	Heating	Drying	3 hrs
5	Cooling		≥ 3 hrs
6	Back to step 1		

Since the compressor may switch off, during the cooling phase, a 'duty cycle' can be distinguished for the compressor. The duty cycle is the total measured time valve-Y3 is activated per hour operation. The duty cycle is the average of the past 24hrs of this value.

Remote Sense

The working pressure of the EtsilineCommPact is standardly measured between solenoid valve Y3 and the outlet manifold. In some circumstances it is desired to measure the working pressure further in the antenna system. In that case you connect a return hose to the remote sense input. The remote sense solenoid valve Y4 needs to be enabled and activated in the Installer menu chapter 6 , internet interface section Parameter settings.

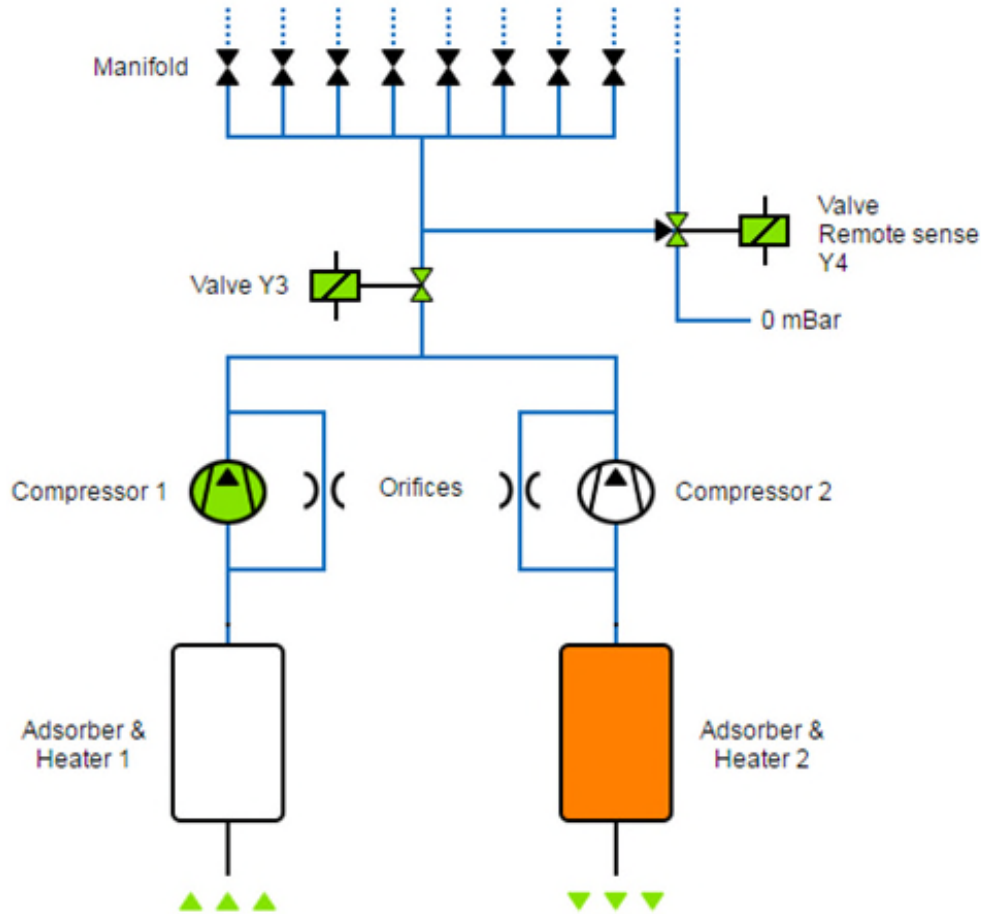

Page left blank intentionally for 2 sided printing purposes

5. Installation

Installation, operation, maintenance and repair shall only be performed by authorized, trained and skilled employees.

Receiving and unpacking

Short Shipment or Incorrect Material Claims

All claims for shortage or incorrect material must be made within thirty (30) days after its receipt at jobsite and the package is opened for condition check. Please review all invoices and shipping documents carefully for possible shortages.

When the air dryer is shipped included AC power adaptor, you will find it in the box of the unit.

Shipping Damage Claims

Equipment must be carefully inspected immediately upon receipt for possible damage incurred during shipment.

In the event that the equipment has sustained visible external damage or it is suspected that internal damage may have occurred, immediately enter a claim with the shipping carrier and notify us. Any indication or damage or careless handling by the carrier should be noted on the delivery receipt. Obtaining the delivery man's signed agreement to any noted damages will facilitate any future insurance claims.

In all cases of damage, visible or suspected, contact your local representative or the factory before attempting to install subject equipment.


Connecting to the system



Do not connect the electrical main supply during installation

- Place the air dryer at a location where air is clean and where the temperature of the air never exceeds the minimum or maximum values.
- Provide enough space around the air dryer so that the purge air can circulate freely.
- Safety devices, protecting covers or insulations on the air dryer are never to be dismantled or adjusted.
- To ensure a trouble-free operation, the air dryer has to be mounted in the rack, or wall and floor with additional brackets.
- Make sure while assembling that all tubes and connections are clean.
- Check the electrical connections of the dryer. Verify that the electrical and alarm connections comply with the regulations.

Tubing

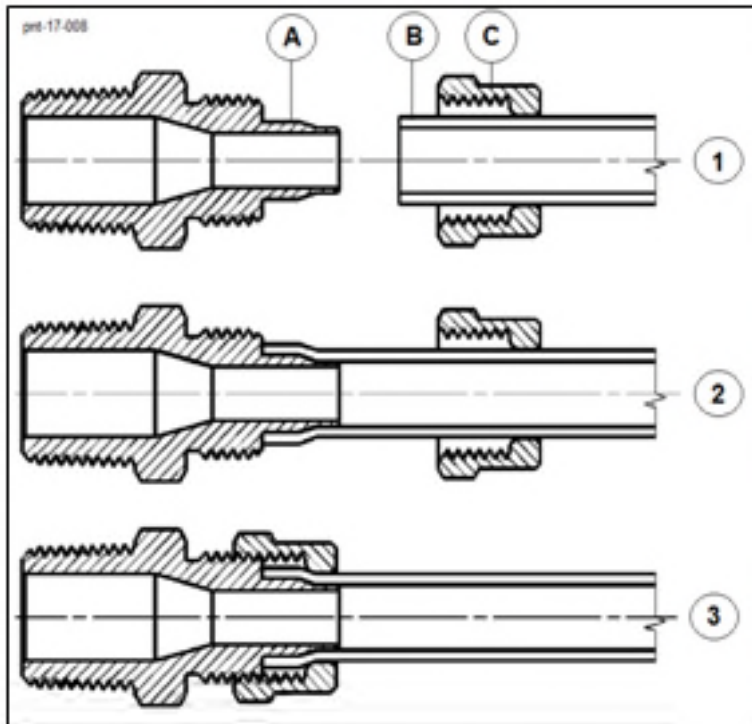

- Plugs and caps (if any) must be removed before connecting the tubing.
- No external force is allowed on air inlet and outlet pipes and the connected tubing should not be under tension.
- The tubing must have the correct diameter.
- Connect the air tubes to the connectors of the dryer.
 - Disassemble nut C from connector A
 - Slide nut C over air tube B (see 1)
 - Push flexible hose over end-tube of connector A until it cannot slide any further (see 2)
 - Re-assemble nut C to coupling A and tighten nut by hand (see 3). Slight extra tightening by using pliers is recommended.

NOTE	Make sure to use hose with correct dimension and enough flexibility. Only then leakages are prevented
------	---


Electrical installation

- Make sure the unit is switched OFF when connected to the mains.
- For position of connectors see chapter 6
- Connect Ethernet cable (minimally Cat 5e) to connector CON4 on back side of unit
- Connect alarm cable to extension plug CON10 (included in delivery) and connect it to panel mounted inlet CON9.
- In case the unit is to be supplied by 48Vdc, connect supply cable to cable socket CON7 (included in delivery) and connect it to panel mounted inlet CON8. After mounting fixate connection by tightening central screw M2.5.
- Suitable cable OD is 4.5 to 6mm. conductor size max 0,75mm²
- In case the unit is delivered with 90-264Vac 50/60Hz adaptor option (0281544), connect supply cable to cable socket CON7 (included in delivery) and connect it to panel mounted inlet CON8.

6. Operating instructions

Control panel

All controls are positioned on the front side of the unit. See below figure with the identification of each control;

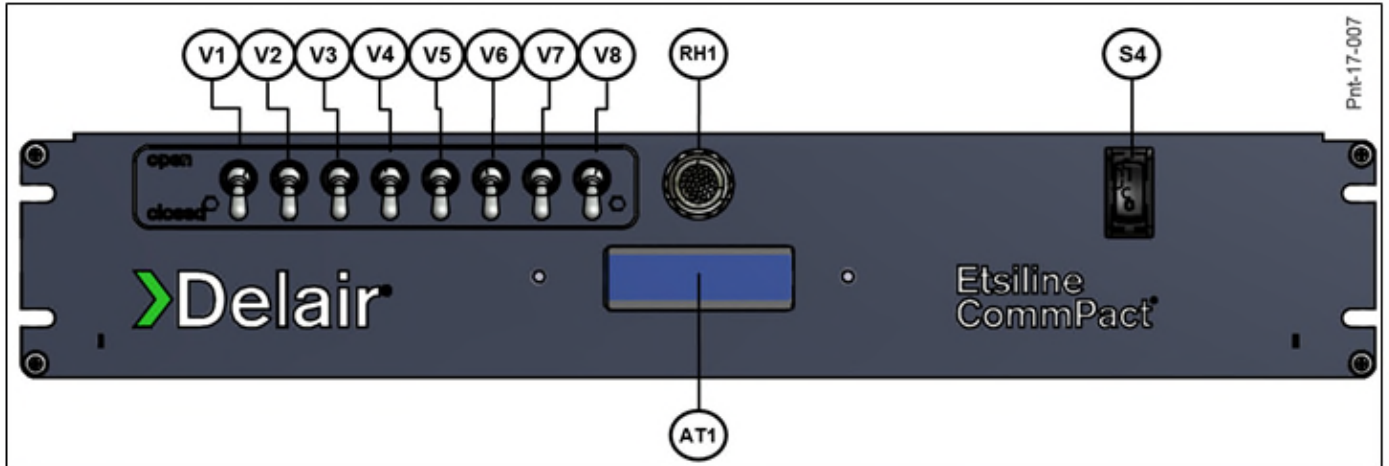

AT1 Digital display

Top line shows status of the process. These are the possibilities;

- Heater 1; adsorber 1 is in heating phase
- Cooling 1; adsorber 1 is in cooling phase
- Heater 2; adsorber 2 is in heating phase
- Cooling 2; adsorber 2 is in cooling phase
- Low Pr; pressure is below set value. Alarm activated
- High Pr; pressure is above set value. Alarm activated
- Pump Al; pump running time exceeds pre-set value. (only during cooling phase)
- High RH; humidity exceeds set value. An alarm is activated.

Furthermore, running hours and pressure are displayed alternately.

Second line shows information on Ethernet connection



RH1 Moisture indication

The dryer is standard provided with a moisture indicator (RH1). The moisture indicator consists of a housing with thread, inspection glass and indicating adsorbent. From the front side the color of the adsorbent can be observed. This adsorbent is in contact with process air and will adsorb moisture from it. The color of the adsorbent is dependent of the amount of water adsorbed. Thus the color is an indication of the relative humidity of the process air. Color will change from blue to pink with increasing humidity;

Number	Relative humidity
Blue – light blue	abt. 10% relative humidity or lower
Light blue – lavender	abt. 20% relative humidity
Lilac	abt. 30% relative humidity
Lilac – pink	abt. 35% relative humidity
Pink	abt. 40% relative humidity or higher

A moisture indicator showing a relative humidity >10% does not necessarily mean that desiccant of dryer needs to be exchanged. It may well be an indication for other causes for example, timer sequence problems, heater breakdown, purge air block-up etc. Please refer to the Fault finding section starting from page 26 to seek for possible causes and resolutions.

Under most operating conditions, the moisture indicator should always show blue color. If not, then the dryer is probably malfunctioning.



Indicator filled with adsorbent which is impregnated with 11% w/w cobalt dichloride (CoCl₂). The amount of cobalt dichloride is very small, however, cobalt II chloride is categorized as a hazardous substance to health and environment..The applicable Material Safety Data Sheet can be found in chapter 11 “MSDS-sheets”.

Don't remove the desiccant from the indicator. Replace the indicator and treat it as hazardous waste according local and/or national risks legislation.



S4 Power switch

Switch to turn ON (I) and OFF (0) the air dryer.




V1..V8 Port ON-OFF switch


With valve V1...V8 each connection positioned on back side of the unit can be opened/closed. Closed valves don't supply dry air anymore to the system

Connections and fuse

Fuse and connections are positioned on the back side of the unit.

NOTE	For units produced after 2016 see fuse section below. In units produced in 2016 the fuse is inside the casing. To check or replace the fuse, the unit shall be opened.
------	--

	Opening of the unit may only be carried out, when unit is switched OFF and disconnected from power supply. Wait enough time to led the unit cool off, before opening the unit.
---	--

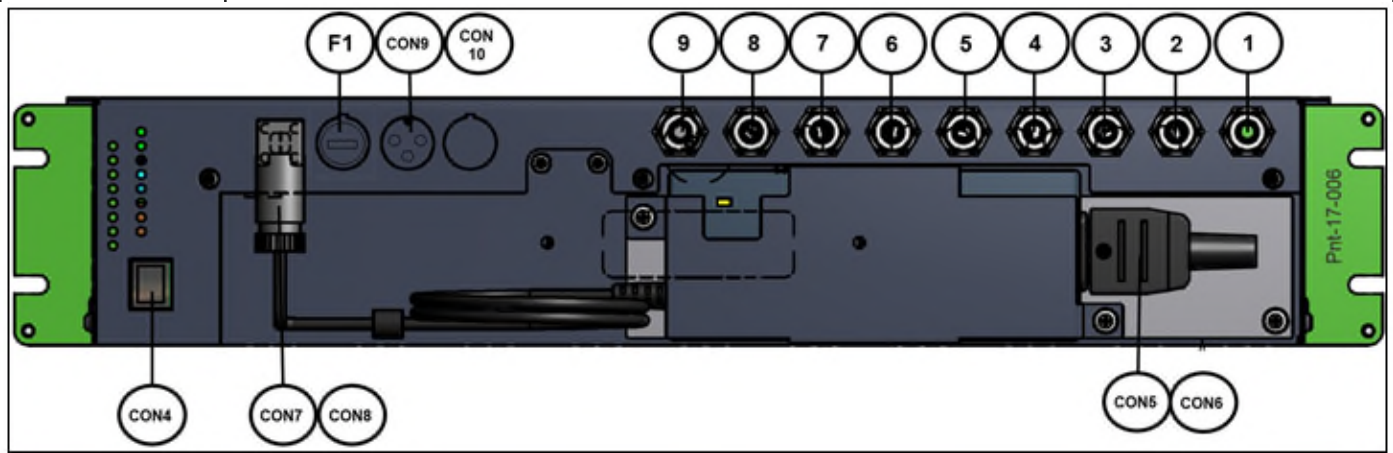

Outlet 1...8 Dry air outlet connection

Hose connection to system. Connection number corresponds to OPEN-CLOSE valve on front of the unit. When corresponding valve is opened, dry air is delivered to the system. Suitable for flexible hoses with internal diameter 6mm and outside diameter of 8mm.





Connection 9 Remote sense connection

Standardly the working pressure is measured at the outlet manifold of the dehydrator. With the Remote Sense Input it is possible to measure the pressure at another location of the system (e.g. near the antenna). You need to connect the Remote Sense Input by a hose with the nipple where you want to measure the pressure. The dehydrator can be operated based on the working pressure at that particular location.



CON4 Internet connection

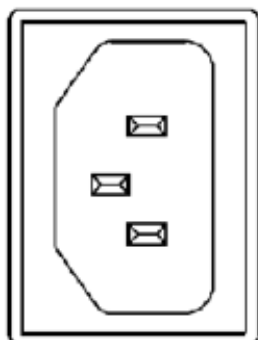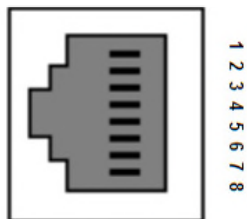


CON5 CON6 Main voltage connector

[Only applicable with option 0281544]

Female socket CON6 included in delivery.

3-pole (phase-neutral-earth) connection suitable for 90-264Vac/1/50-60Hz – 90W.

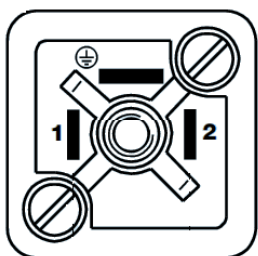


CON7

CON8 48Vdc Supply connector

Female socket CON7 included in delivery.

3-pole connection suitable for 48Vdc.

Pin 1: +, Pin 2: -, 3 earth

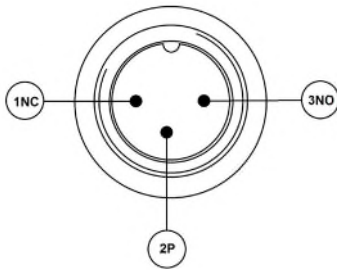

CON9 CON10

Alarm connector
Connector for external alarm. Potential free contact.



F1 Fuse

Fuse holder for 2A-fuse-slow(20 mm) which protects the heater elements. Twist to open.

Before start-up

Check that:

- All tubes and/or pipes in the air dryer are in proper condition, firmly attached and do not rub.
- There are no leaks.
- All fixings are firmly attached.
- The electrical connections are secured and in proper condition.
- The air outlet valve and the air system, i.e. pipes, joints, manifolds, valves, tubes etc. are in proper condition without any wear or defect.

Starting

To start up the dryer:

1. Connect the dryer to the mains power supply.
2. Set power switch to "I".
3. Open the valves of the connected outlets.
4. Check the connections of the dryer for air leaks.
5. Check the nominal working pressure on the display.
6. Check the low pressure alarm contact by creating a leakage. To do this, open one of the remaining valves or disconnect one of the air tubes.

The low pressure alarm switch is activated after delay of approx. 1 min.

Stopping

1. Switch off the dryer by means of the on-off switch
2. Disconnect the dryer from the power supply.
3. Close all the ball valves.

Power failure

After power failure the unit will re-start automatically and proceed with the cycle where it was interrupted. All settings remain stored in the controller of the unit


Internet interface

Log-ON

By connecting the delair® EtsilineCommPact to internet it is possible to check the status of the dehydrator and change parameters like working pressure and alarms.

After start-up of the dehydrator you read on the display (line 2) the IP address of the unit. After you have filled in the IP address in your web browser (preferable Google Chrome), you need to fill in your Username and Password. The default username and password for software revision of ETSI010202 and higher are:

Username : admin
Password : admin

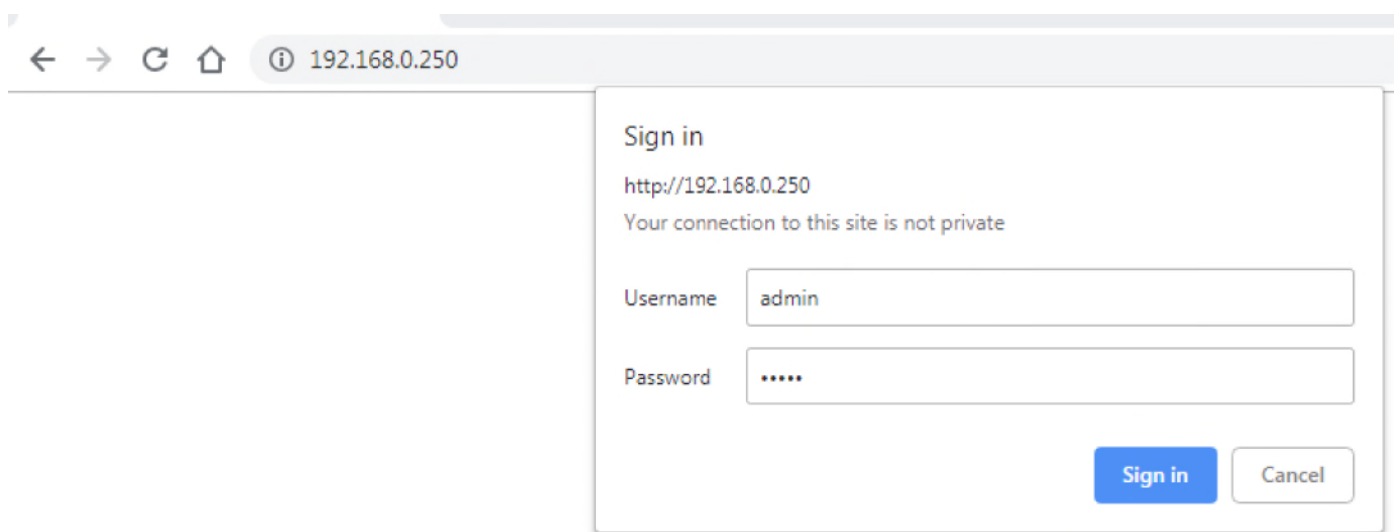


PNT-18-030

NOTE	For units with an earlier software revision than ETSI010202 the default username and password are: Username : SPXETSI Password : ETSIAdmin123!
------	--

If your computer doesn't recognize the static IP address of the dehydrator (192.168.0.250) you need to change the IP address of your computer to 192.168.0.100.

You will find a short demo video on the enclosed USB-stick

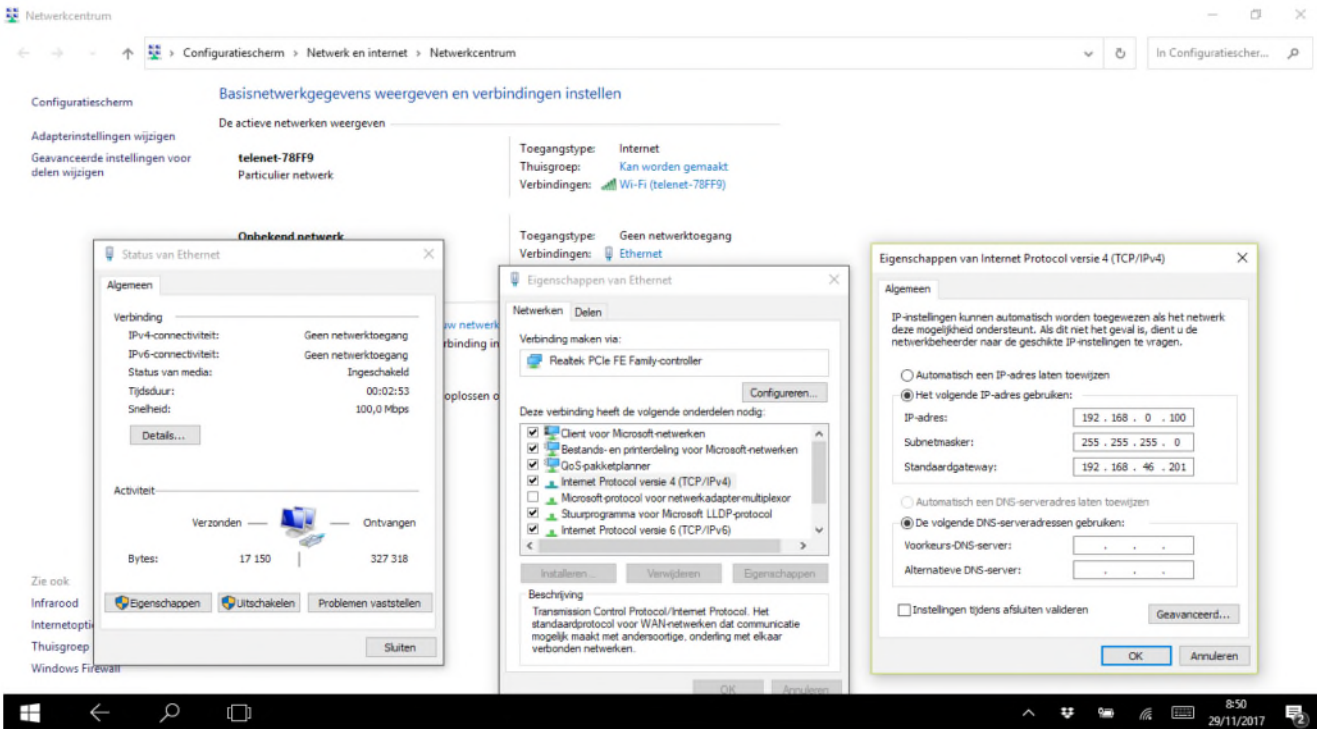

pnt-18-031

Homepage

After log-on you see the homepage of the dehydrator.

The screenshot shows the SPXFLOW delair Dehydrator homepage. On the left is a navigation menu with sections: System info (General, Network, Credentials, Event log), Configuration (Device, Operation, Alarms, SNMP, Soft reset, Time & date), Test Status (I/O), and Home. The main content area is titled 'Home' and features a schematic diagram of the dehydrator system. The diagram shows a manifold at the top with six valves, leading to a 0% RH sensor and Valve Y3. Below this are two parallel paths, each containing a compressor (Compressor 1 and Compressor 2) connected to an adsorber and heater (Adsorber & Heater 1 and Adsorber & Heater 2). Orifices are located between the compressors. The adsorbers are shown as orange and white rectangles with green triangles below them. To the right of the diagram are sections for 'Device' (Runtime: 0.3 hours, Valve Y3 duty cycle: 0%, Time until next phase: 02:39:21, Duty cycle mode: Disabled, Next phase, Test alarm) and 'Alarms' (Low pressure alarm). The reference 'prt-18-032' is located at the bottom right of the diagram area.

Homepage

On this homepage you see the status of the dehydrator with the alarms. The green colored items are activated. An activated heater colors orange.

Device	
Runtime	Total operation time of the dehydrator
Valve Y3 duty cycle*	Duty Cycle of the dehydrator
Time until next phase	Count down to the next sequence of the dehydrator
Next phase	Switch over to new sequence
Attention	For explanation duty cycle

* See chapter 4 Functional description cycle

Seq.	Adsorber 1	Adsorber 2	Time
1	Drying	Heating	3 hrs
2		Cooling	≥ 3 hrs
4	Heating	Drying	3 hrs
5	Cooling		≥ 3 hrs
6	Back to step 1		

Cycle subdivision

Alarms

Low, high pressure alarm
 Compressor run time alarm
 Humidity alarm (if applicable)

System info

General

Latest version of the software

← → ↻ 🏠 ⓘ Not secure | 192.168.0.250/#/config/general

SPXFLOW delair © Dehydrator

Home

System info

- General
- Network
- Credentials
- Event log

Configuration

- Device
- Operation
- Alarms
- SNMP
- Soft reset
- Time & date

Test Status

- I/O

General

Version	1.04.00		
MicroSD card inserted	Yes		
MicroSD card size	3.8		GB
MicroSD card remaining size	3.8		GB

PNT-18-033

Software version

Network

Network information

← → ↻ 🏠 ⓘ Not secure | 192.168.0.250/#/config/network

SPXFLOW delair © Dehydrator

Home

- System info
 - General
 - Network
 - Credentials
 - Event log
- Configuration
 - Device
 - Operation
 - Alarms
 - SNMP
 - Soft reset
 - Time & date
- Test Status
 - I/O

Network

Active Static IP address

DHCP	Disabled
IP address	192.168.0.250
Netmask	255.255.255.0
Gateway	192.168.0.1
MAC address	70:b3:d5:01:f1:fd

pnt-18-034

Network

← → ↻ 🏠 ⓘ Not secure | 192.168.0.250/#/config/network

SPXFLOW delair © Dehydrator

Home

- System info
 - General
 - Network
 - Credentials
 - Event log
- Configuration
 - Device
 - Operation
 - Alarms
 - SNMP
 - Soft reset
 - Time & date
- Test Status
 - I/O

Network

Active Static IP address

DHCP	Disabled ▾
Static IP address	192 . 168 . 0 . 250
Netmask	255 . 255 . 255 . 0
Gateway	192 . 168 . 0 . 1

Save

pnt-18-035

Network information

Credentials

Home

System info

- General
- Network
- Credentials
- Event log

Configuration

- Device
- Operation
- Alarms
- SNMP
- Soft reset
- Time & date

Test Status

- I/O

Credentials

Username

Password

Confirm password

Save

pnt-18-035

Credentials


Default

Username : admin
Password : admin

We suggest to change the username and password immediately at fist log-on.

The SOFT reset has no impact on the set credentials.

Reset to default username and password by a HARD reset on the PCB of the CommPact.

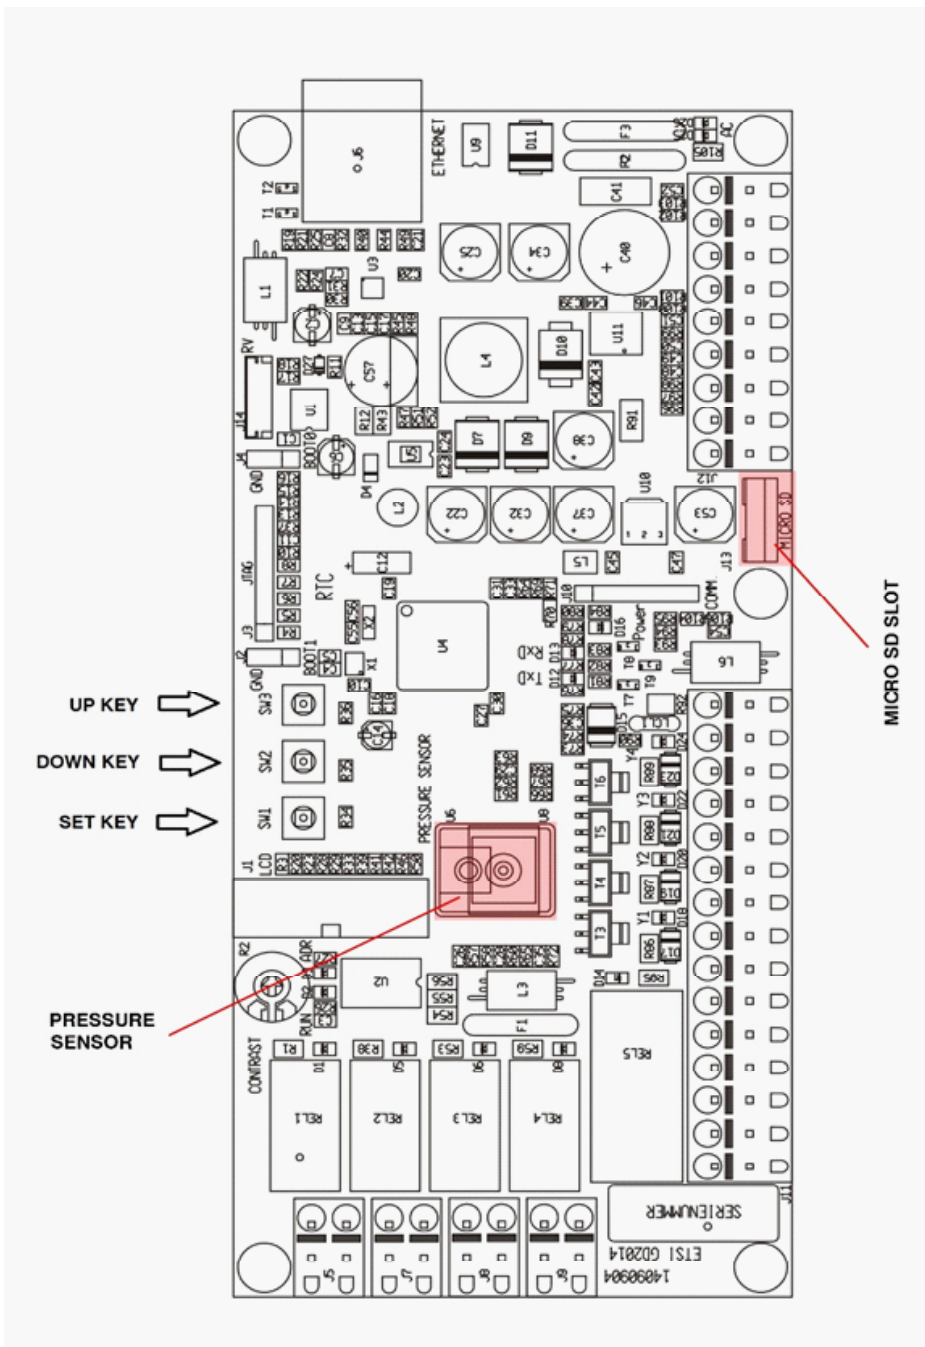

After a hard reset, all settings will be overwritten with default settings.

To apply a hard reset, disconnect power to the CommPact. Press and hold the set key and power the unit again. The display starts to count down. Hold the set key until the dehydrators starts up again. The “run” led will blink a few times, this indicates the settings are overwritten. The hard reset has been executed.

IMPORTANT	This action cannot be undone.
------------------	-------------------------------

Configuration

Device

Gives a list of all runtime counters and current configuration.

← → ↻ 🏠 ⓘ Not secure | 192.168.0.250/#/config/device

SPXFLOW delair © Dehydrator

Home

System info

- General
- Network
- Credentials
- Event log

Configuration

- Device
- Operation
- Alarms
- SNMP
- Soft reset
- Time & date

Test Status

- I/O

pnt 18-037

Device

Runtime	0.4	hours
Runtime compressor 1	0	hours
Runtime compressor 2	0.4	hours
Remaining runtime - heating 1	02:33:30	
Remaining runtime - cooling 1	02:59:55	
Remaining runtime - heating 2	02:59:14	
Remaining runtime - cooling 2	03:00:00	
Pressure sensor range	5	PSI
Enable remote sens	Off	
Analog sensor input	Enabled	
Sensor type	Analog	
Valve Y3 dutycycle	0	%
Actual dutycycle state (on/off)	Off	
Remaining time of current period	0	minutes

Device configuration

Operation

In these fields the low and high operational pressure can be changed, within the design limits of 0 – 100 mbar(g)

Default

Pressure low limit : 20 mbar(g)

Pressure high limit : 30 mbar(g)

The screenshot shows a web browser window with the address bar displaying "192.168.0.250/#/config/operation". The page title is "SPXFLOW delair © Dehydrator". A navigation menu on the left includes "System info", "Configuration", and "Test Status". The "Operation" configuration section contains the following fields:

Pressure low limit	<input type="text" value="20"/>	mBarg
Pressure high limit	<input type="text" value="30"/>	mBarg
Duty cycle mode	<input checked="" type="checkbox"/>	
Duty cycle time	<input type="text" value="1"/>	minutes
Compressor duty	<input type="text" value="50"/>	%

A "Save" button is located at the bottom right of the configuration area.

pnt-18-038

Operation

Alarms

In these fields the alarm levels can be changed.

Home

SPXFLOW delair © Dehydrator

System info

- General
- Network
- Credentials
- Event log

Configuration

- Device
- Operation
- Alarms
- SNMP
- Soft reset
- Time & date

Test Status

- I/O

Alarms

Alarm delay	<input type="text" value="60"/>	seconds
Low pressure alarm	<input type="text" value="10"/>	mBarg
High pressure alarm	<input type="text" value="7000"/>	mBarg
Pressure alarm hysteresis	<input type="text" value="5"/>	mBarg
Compressor runtime alarm	<input type="text" value="60"/>	minutes
Humidity alarm	<input type="text" value="7"/>	%

Save

pnt-18-039

Alarms

Alarm delay:

When an alarm restores within de delay time, no alarm signal will be given.

Low pressure alarm:

When the measured pressure drops under this level, a low pressure alarm is given.

High pressure alarm:

When the measured pressure rises to this level, a high pressure alarm is given.
(Switched off, by default setting on 7.000 mbar(g))

Alarm pressure hysteresis:

Setting of the hysteresis of the low and high pressure.

Compressor runtime alarm:

When de compressor runs more than the set running hours, a run time alarm is given

Humidity alarm (option):

Humidity alarm is set on 7% RH, which is a Dew point of -15°C at 22°C ambient

NOTE	The PCB (Control board) has been designed for multiple types of air dryers. At the change of settings, you will notice that the setting range is wider than the design limits of the delair® Etsiline Compact. For the design limitations of this unit please refer to table “parameter settings” in this section
------	---

Event log

In this field the latest events are logged.

The events stored can be downloaded via the download button, this will generate a komma separated value file. Available in you download folder. A copy of this file will be stored on the internal SD card of the Etsi-CommPact.

Home

SPXFLOW delair © Dehydrator

System info

- General
- Network
- Credentials
- Event log

Configuration

- Device
- Operation
- Alarms
- SNMP
- Soft reset
- Time & date

Test Status

- I/O

Event log Download

Id	Date	Time	Event
28	2018-10-17	11:49:05	High pressure alarm activated
27	2018-10-17	11:49:00	Device boot
26	2018-10-17	11:48:19	High pressure alarm activated
25	2018-10-17	11:47:40	High pressure solved
24	2018-10-17	11:47:28	High pressure alarm activated
23	2018-10-17	11:47:13	Device boot
22	2018-10-17	11:47:03	Device boot
21	2018-10-17	11:46:43	High pressure solved
20	2018-10-17	11:42:24	High pressure alarm activated
19	2018-10-17	11:42:18	Low pressure alarm solved
18	2018-10-17	11:42:07	Low pressure alarm activated
17	2018-10-17	11:42:01	High pressure solved
16	2018-10-17	11:41:45	High pressure alarm activated
15	2018-10-17	11:41:39	Low pressure alarm solved
14	2018-10-17	11:41:36	Low pressure alarm activated
13	2018-10-17	11:41:31	High pressure solved
12	2018-10-17	11:41:27	High pressure alarm activated
11	2018-10-17	11:41:21	Low pressure alarm solved
10	2018-10-17	11:41:10	Low pressure alarm activated
9	2018-10-17	11:41:09	High pressure solved
8	2018-10-17	11:41:08	High pressure alarm activated
7	2018-10-17	11:41:03	Low pressure alarm solved
6	2018-10-17	11:40:47	Low pressure alarm activated
5	2018-10-17	11:40:41	High pressure solved
4	2018-10-17	11:40:28	High pressure alarm activated

1 2 Next

Click [here](#) to reset the eventlog

pnt-18-040

Event log

The event log file has the following format:

Event ID	YYYY-MM-DD	HH:MM	Event code	Event description
----------	------------	-------	------------	-------------------

A soft reset will not delete the event log.

A hard reset will delete the events displayed in the browser, but will not affect the event log available for download.

The complete eventlog can be deleted via the “Click here to reset the eventlog” option in the browser page.

Remote Sense

The working pressure of the EtsilineCommPact is standard measured between solenoid valve Y3 and the outlet manifold. In some circumstances it is desired to measure the working pressure further in the antenna system. In that case you connect a return hose to the remote sense input. The remote sense solenoid valve Y4 needs to be activated.

For activation of the Remote Sense it should be enabled first in the installer menu.

You will find a short demo video on the enclosed USB-stick

The screenshot shows a web browser window with the URL `192.168.0.250/#/config/remote_sense`. The page header displays the logo **SPXFLOW delair © Dehydrator**. A navigation menu on the left includes sections for **System info** (General, Network, Credentials, Event log), **Configuration** (Device, Operation, Alarms, SNMP, Soft reset, Time & date), and **Test Status** (I/O). The main content area is titled **Remote sense** and contains a single configuration item: **Remote sense enabled** with a checked checkbox. A **Save** button is located at the bottom right of the configuration area.

pnt-18-041

Remote sense

SNMP

Community string: public

Trap receiver 1 enabled:

Trap receiver 1: 1 . 0 . 0 . 1

Trap receiver 2 enabled:

Trap receiver 2: 1 . 0 . 0 . 1

Save

pnt-18-042

SNMP

The delair® EtsilineCommPact supports the SNMPv1. The standard community string is “public”. The community string can be adapted with this SNMP menu. Two SNMP trap destinations can be enabled and switched on/off.

The full description of the SNMP interface is found in the SPX-MIB file.

Time & Date

Adjusts/sets the time and date of the control board internal clock. Will reset when the dryer was powerless for a long time.

Time and date are stored in the event log.

Time: 9:47 PM

Date: 1/4/2018

Save

pnt-18-046

Time and date

Soft reset

The soft reset brings all settings made by web interface back to the default settings. The username and password will not change to default nor will the event log be affected.

The screenshot shows the web interface for the SPXFLOW delair © Dehydrator. The browser address bar shows '192.168.0.250/#/softreset'. The page title is 'SPXFLOW delair © Dehydrator'. The navigation menu on the left includes 'System info', 'Configuration', and 'Test Status'. The 'Soft reset' page is active, showing a 'Back to factory settings' link and a 'Reset' button. The page number 'pnt-18-043' is visible in the bottom right corner.

Soft reset

Test status

I/O

This is the overview of the current status of the relays, digital outputs and the test modus.

The screenshot shows the web interface for the SPXFLOW delair © Dehydrator. The browser address bar shows '192.168.0.250/#/config/i/o'. The page title is 'SPXFLOW delair © Dehydrator'. The navigation menu on the left includes 'System info', 'Configuration', and 'Test Status'. The 'I/O' page is active, showing a table of status information. The page number 'pnt-18-044' is visible in the bottom right corner.

Test modus active	Off
Absorber & Heater 1	Off
Absorber & Heater 2	On
Compressor 1	On
Compressor 2	Off
Valve Y1	Off
Valve Y2	Off
Valve Y3	On
Valve Remote sense Y4	Off
Alarm relay	Off
Voltage analog input	3 mV

Test status

Parameter settings

Browser menu	Parameter	Default Setting	Design Limits / remarks
Network_Static IP address	DHCP	Disabled	To switch DHCP-setting (On –Off) The air dryer will request network for an IP-address. In case the DHCP is switched OFF than the air dryer will take over the set IP-address, netmask and gateway. The IP-address then is STATIC.
	Static IP address	192.168.0.250	Sets the static IP Address
	Netmask	255.255.255.0	Sets the staictNetmask Address
	Gateway	192.168.0.1	Sets the static Gateway Address
Credentials	Username	admin	Sets the username
	Password	admin	Sets the password
	Confirm password	admin	Confirms the password
Operation	Pressure low limit	20 mbar(g)	Lower limit (compressor on) When system pressure drops below this setting, supply valve Y3 and, dependent of other conditions, compressor is switched ON
	Pressure high limit	30 mbar(g)	High limit (compressor off) When system pressure exceeds this setting, supply valve Y3 and, dependent of other conditions, compressor is switched OFF During heating cycle compressor is always ON and only feed valve Y3 is switched OFF. Ensure this pressure is always higher than the Press. low limit.
	Duty cycle mode	Off	Duty cycle will allow the user to limit the “ON” time of the built in compressor of the Etsi. Skip from value “ON” to “OFF” and press set-key
	Duty cycle time	1 min	Sets the cycle time of the duty cycle. (0 – 60 minutes). Setting is only active when duty cycle mode is enabled
	Compressor duty	50%	Percentile “ON” time of the compressor. (10% - 100%) With a duty cycle time of 3 minutes and a duty cycle time of 30%. The compressor will run for 54 seconds and will stop for 126 seconds. Setting is only active when duty cycle mode is enabled.

Browser menu	Parameter	Default Setting	Design Limits / remarks
Alarms	Alarm delay	60 sec	Alarm delay. (1 - 900 seconds). Once a discrepancy is found (low pressure, high pressure, max. time compressor, unsuccessful BiT, high RH%), all the alarms will be activated after the actual adjusted delay. Then a message is shown on the display and the alarm relay is activated. When the alarm restores within this delay, there will be no active alarms.
	Low pressure alarm	10 mbar(g)	Low Pressure alarm (0 – 7000 mbar) Lower limit (alarm on) In case system pressure drops below this setting, LOW PR., alarm is displayed and alarm contact switches. This alarm has an adjustable time delay of 0-900 sec. Refer to alarm delay section below. Minimum pressure will not be monitored if duty cycle mode is enabled.
	High pressure alarm	7000 mbar(g)	High alarm pressure (0 – 7000 mbar) Higher limit (alarm on) In case system pressure exceeds this setting, HIGH PR., alarm is displayed and alarm contact switches. This alarm has an adjustable time delay of 0-900 sec. Refer to alarm delay section below.
	Pressure alarm hysteresis	5 mbar(g)	Pressure alarm difference for low and high pressure alarm (5-250 mbar). Hysteresis (alarm off) Example: (figures are default settings) Lower press.alarm + Press.alarmhyst. = Low alarm off at 10 mbar + 5 mbar = 15 mbar High press.alarm – Press.alarmhyst = High alarm off at 30 mbar -5mbar = 25 mbar
	Compressor run-time alarm	60 minutes	Excessive run time compressor (0 – 60 min.) When the compressor operates beyond adjusted time limit, an excessive air consumption alarm will be generated. Alarm is only activated during “COOL1” or “COOL2” period and not function during the “HEATER1” or “HEATER2” regeneration period. Display would indicate “PUMP AL.” if this setting is exceeded
	Humidity alarm	7%	Humidity alarm setting (5-100%) When system humidity exceeds this setting, an alarm “HIGH RH” will be displayed after presetted time-delay. Alarm setting only possible with a RH-sensor and will not alarm in case a DP-sensor is installed.

Browser menu	Parameter	Default Setting	Design Limits / remarks
SNMP	Communication string	Public	
	Trap receiver 1 enabled	Disable button	
	Trap receiver 1	1.0.0.1	
	Trap receiver 2 enabled	Disable button	
	Trap receiver 2	1.0.0.1	
Installer	Number of compressors	2	Number of compressors within the system (1-2)
	Low pressure alarm	10	Low Pressure alarm (0 – 7000 mbar) Lower limit (alarm on) In case system pressure drops below this setting, LOW PR., alarm is displayed and alarm contact switches. This alarm has an adjustable time delay of 0-900 sec. Refer to alarm delay section below. Minimum pressure will not be monitored if duty cycle mode is enabled.
	High pressure alarm	7000	High alarm pressure (0 – 7000 mbar) Higher limit (alarm on) In case system pressure exceeds this setting, HIGH PR., alarm is displayed and alarm contact switches. This alarm has an adjustable time delay of 0-900 sec. Refer to alarm delay section below.
	Pressure alarm hysteresis	5	Pressure alarm difference for low and high pressure alarm (5-250 mbar). Hysteresis (alarm off) Example: (figures are default settings) Lower press.alarm + Press.alarmhyst. = Low alarm off at 10 mbar + 5 mbar = 15 mbar High press.alarm – Press.alarmhyst= High alarm off at 30 mbar -5mbar = 25 mbar
	Reset operation time	Off	Reset the running hours of the unit
	Reset runtime compr. 1	Off	Resets the running hours of compressor 1
	Reset runtime compr. 2	Off	Resets the running hours of compressor 2
	Pressure sensor range	5 PSI	Pressure sensor range (1-150PSI)

Browser menu	Parameter	Default Setting	Design Limits / remarks
Installer	Adjust P-sensor	0 mbarg	Pressure sensor correction (-200 - +200mbar) With this function an offset to the actual reading can be set. This value will be added/ subtracted from the actual pressure measurement.
	Enable remote sense	Off	To enable remote sensing (On – Off) Enabling this only makes sense if this option is installed. Remote sensing is the option to measure the pressure downstream the air dryer (in system) instead of at the discharge of the air dryer.
	Remote sense enabled	Disable button	No function
	PSI reading	Off	PSI Read-out (On - Off) Switch between PSI (On) and mbar read-out (Off). Functions assignments settings always in mbar's
	Compressor run-time alarm	60 minutes	Excessive run time compressor (0 – 60 min.) When the compressor operates beyond adjusted time limit, an excessive air consumption alarm will be generated. Alarm is only activated during “COOL1” or “COOL2” period and not function during the “HEATER1” or “HEATER2” regeneration period. Display would indicate “PUMP AL.” if this setting is exceeded
	Test modus active	Off	Test mode (On – Off) This function puts the unit in test mode. All I/O are frozen in the current state. I/O can be changed with below test functions.
	Analog sensor input	Disabled	Selects whether an analog sensor is installed (Off-On) Switches the relative humidity or dew point sensor ON or OFF. Only applicable for installations with RH-sensor
	Sensor type	Digital	Analog / Digital
	Sensor units	Humidity	Units for humidity (RH – DP) Switches between a RH-sensor and a DP-sensor
	Humidity alarm	7%	Humidity alarm setting (5-100%) When system humidity exceeds this setting, an alarm “HIGH RH” will be displayed after presetted time-delay. Alarm setting only possible with a RH-sensor and will not alarm in case a DP-sensor is installed.

Browser menu	Parameter	Default Setting	Design Limits / remarks
Installer	Alarm delay	60 seconds	Alarm delay. (1 - 900 seconds). Once a discrepancy is found (low pressure, high pressure, max. time compressor, unsuccessful BiT, high RH%), all the alarms will be activated after the actual adjusted delay. Then a message is shown on the display and the alarm relay is activated. When the alarm restores within this delay, there will be no active alarms.
	RH sensor 0% voltage	0 V	RH 0% voltage (0 – 10V) Sets the sensor output voltage that corresponds with a measured value of 0% RH.
	RH sensor 100% voltage	10 V	RH 100% voltage (0 – 10V) Sets the sensor output voltage that corresponds with a measured value of 100% RH. 0 – 10 V

IP-address/#/config/installer

Home

System info

- General
- Network
- Credentials
- Event log

Configuration

- Device
- Operation
- Alarms
- SNMP
- Soft reset
- Time & date

Test Status

- I/O

Installer

Measurements Settings

Number of compressors	2 Compressors ▼	
Low pressure alarm	10	mBarg
High pressure alarm	7000	mBarg
Pressure alarm hysteresis	5	mBarg
Pressure low limit	20	mBarg
Pressure high limit	40	mBarg
Reset operation time	Off ▼	
Reset runtime compr. 1	Off ▼	
Reset runtime compr. 2	Off ▼	
Pressure sensor range	5	PSI
Adjust p-sensor	0	mBarg
Enable remote sens	Off ▼	
Remote sense enabled	<input type="checkbox"/>	
PSI reading	Off ▼	
Compressor runtime alarm	60	minutes
Test modus active	Off ▼	
Analog sensor input	Enabled ▼	
Sensor type	Analog ▼	
Sensor units	Humidity ▼	
Humidity alarm	7	%
Alarm delay	60	seconds
RH sensor 0% voltage	0	V
RH sensor 100% voltage	10	V

Save

pnt-18-045


Installer menu

IMPORTANT


The PC/Laptop needs to have Windows 7 or higher. Windows asks with a pop-up permission to apply the software. If the pop-up doesn't appear, open the software as administrator, by clicking right on the installer icon and choose "Run as administrator"

ETSI Installer Firewall Permissions

The ETSI Installer application requires a network connection to communicate with the ETSI controller. By default, the Windows operating system uses the Windows Firewall to monitor all applications for network traffic. Once the firewall detects that an application is trying to communicate over the network, the firewall creates a pop-up, prompting the user to allow or block network traffic for this app. Clicking the “Allow access” button will add a rule to the firewall to allow the ETSI Installer application to communicate on the network.

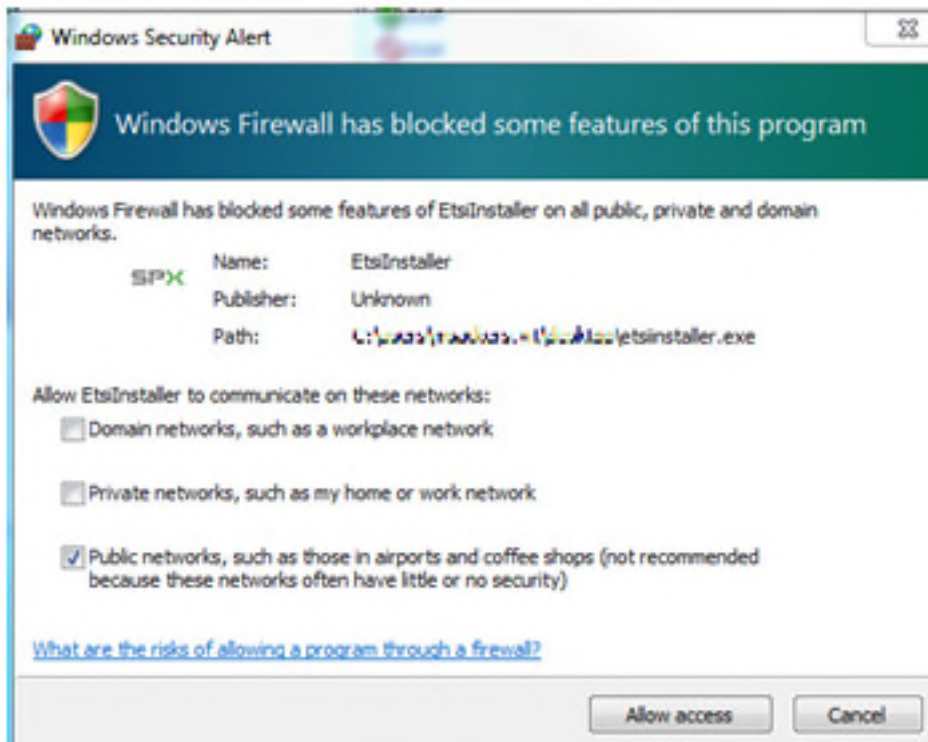

If the cancel button is clicked, a rule will be added to the firewall to always block network traffic to and from the application. Removing this rule has to be done manually from the Windows Firewall settings. These settings can be found in the Windows Control Panel under: Control Panel -> System and Security -> Windows Firewall. Select the “Advanced settings” menu to open the Windows Firewall’s rules and exceptions listing and go to the Inbound rules.

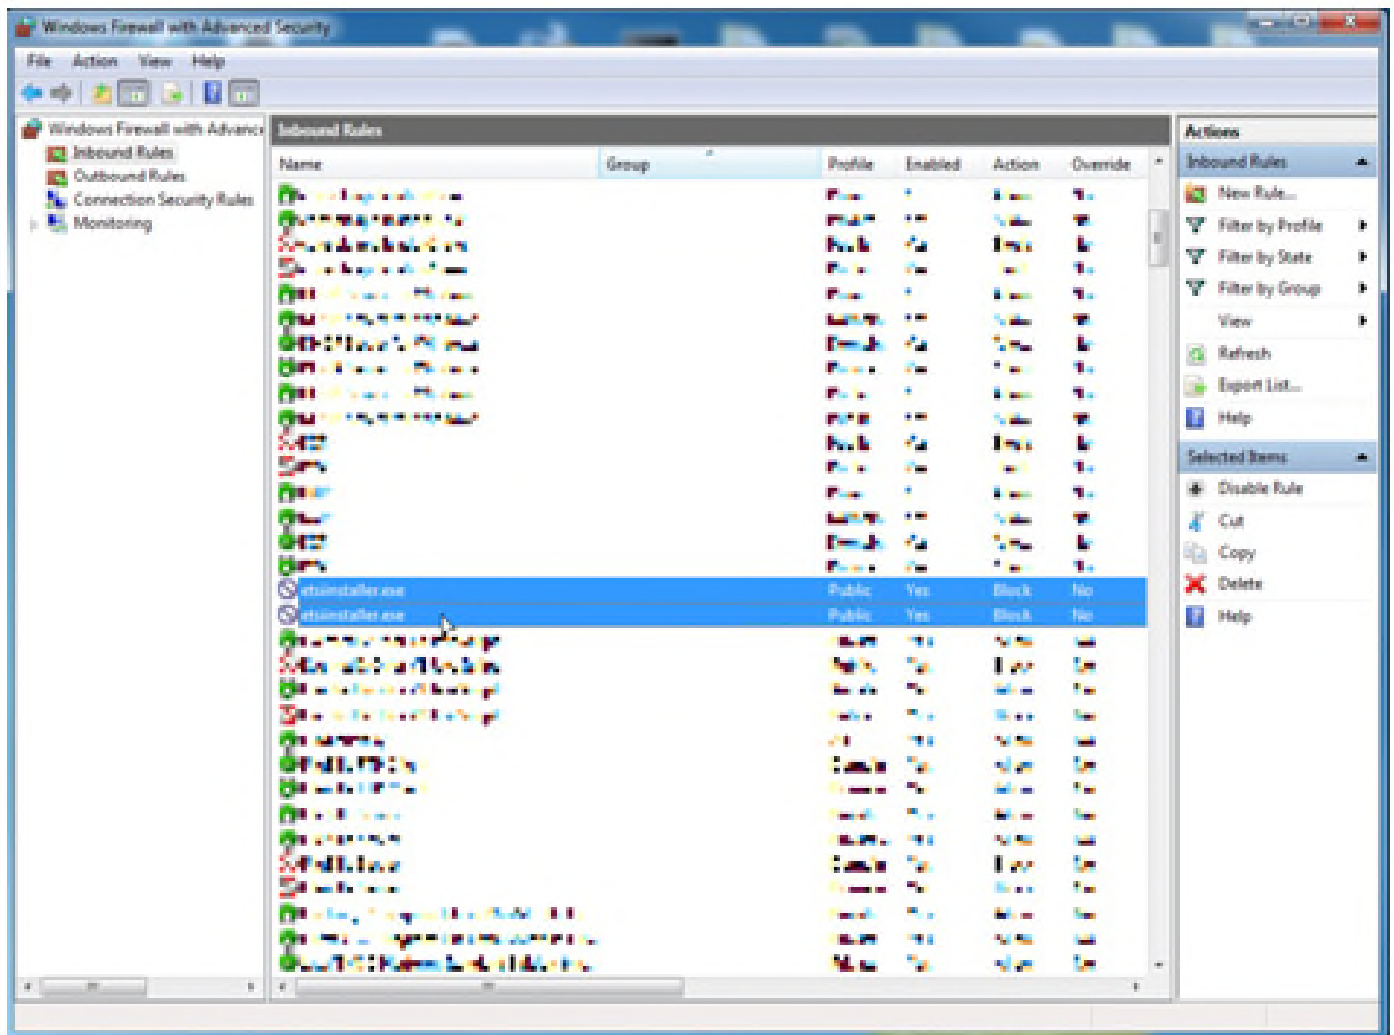

As the above imageshows, the ETSI Installer application’s access to the public network has been blocked. Select both rules and press “delete” to remove these rules. Once the ETSI Installer application is rebooted, the Windows Firewall will once again detect that the application is trying to access the network, but it has no rule for this application. Therefore, you will once again be prompted to allow or block network access for this application with the popup shown in the first image.

SNMP Communication

SPX-MIB DEFINITIONS ::= BEGIN

IMPORTS

enterprises, NetworkAddress, IpAddress
FROM RFC1155-SMI
OBJECT-TYPE
FROM RFC-1212
TRAP-TYPE
FROM RFC-1215;

IWIP OBJECT IDENTIFIER ::= { enterprises 26381 }

spxCommPact OBJECT IDENTIFIER ::= { IWIP 1 }

measurements OBJECT IDENTIFIER ::= { spxCommPact 1 }

settings OBJECT IDENTIFIER ::= { spxCommPact 2 }

traps OBJECT IDENTIFIER ::= { spxCommPact 3 }

-- *****
-- .1.3.6.1.4.1.26381.1.1.X.port
-- non configurable parameters
-- *****

system OBJECT IDENTIFIER ::= { measurements 1 }

version OBJECT-TYPE
SYNTAX INTEGER
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Software version”
::= { system 1 }

microSDInserted OBJECT-TYPE
SYNTAX INTEGER
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “MicroSD card inserted”
::= { system 2 }

microSDCapacity OBJECT-TYPE
SYNTAX INTEGER
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “MicroSD card capacity (1/10th GB)”
::= { system 3 }

microSDCapacityRemaining OBJECT-TYPE
SYNTAX INTEGER
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “MicroSD card remaining capacity (1/10th GB)”
 ::= { system 4 }

ethernet OBJECT IDENTIFIER ::= { measurements 2 }

dHCPEnabled OBJECT-TYPE
SYNTAX INTEGER {disabled(0), enabled(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “DHCP Enabled”
 ::= { ethernet 1 }

ethernetState OBJECT-TYPE
SYNTAX INTEGER {disconnected(0), connected(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Ethernet connection state”
 ::= { ethernet 2 }

activeIP OBJECT-TYPE
SYNTAX IpAddress
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Active IP address”
 ::= { ethernet 3 }

activeNetMask OBJECT-TYPE
SYNTAX IpAddress
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Active netmask”
 ::= { ethernet 4 }

activeGateway OBJECT-TYPE
SYNTAX IpAddress
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Active gateway”
 ::= { ethernet 5 }

sensors OBJECT IDENTIFIER ::= { measurements 3 }

pressure OBJECT-TYPE
SYNTAX INTEGER (0..65535)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Pressure sensor readout in mBarg”
::= { sensors 1 }

humidity OBJECT-TYPE
SYNTAX INTEGER (0..100)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Relative humidity readout”
::= { sensors 2 }

dewpoint OBJECT-TYPE
SYNTAX INTEGER (9994000..10006000)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Dewpoint sensor readout in 1/100th degree C -60 -> +60 range with 10.000.000 offset at 0 degrees”
::= { sensors 3 }

status OBJECT IDENTIFIER ::= { measurements 4 }

runtime OBJECT-TYPE
SYNTAX INTEGER (0..99999999)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Device runtime in 1/10th hours”
::= { status 1 }

compressor1Runtime OBJECT-TYPE
SYNTAX INTEGER (0..99999999)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Compressor 1 runtime in 1/10th hours”
::= { status 2 }

compressor2Runtime OBJECT-TYPE
SYNTAX INTEGER (0..99999999)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Compressor 2 runtime in 1/10th hours”
::= { status 3 }

systemCurrentPhase OBJECT-TYPE
SYNTAX INTEGER {heat1(0), cool1(1), heat2(2), cool2(3)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Current phase of the dryer’s process”
 ::= { status 4 }

remainingRuntimeHeat1 OBJECT-TYPE
SYNTAX INTEGER (0..10800)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Remaining runtime in Heat1 phase in seconds”
 ::= { status 5 }

remainingRuntimeCool1 OBJECT-TYPE
SYNTAX INTEGER (0..10800)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Remaining runtime in Cool1 phase in seconds”
 ::= { status 6 }

remainingRuntimeHeat2 OBJECT-TYPE
SYNTAX INTEGER (0..10800)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Remaining runtime in Heat2 phase in seconds”
 ::= { status 7 }

remainingRuntimeCool2 OBJECT-TYPE
SYNTAX INTEGER (0..10800)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Remaining runtime in Cool2 phase in seconds”
 ::= { status 8 }

y3DutyCycle OBJECT-TYPE
SYNTAX INTEGER (0..100)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Valve Y3 dutycycle average over 24h”
 ::= { status 9 }

pwmModeState OBJECT-TYPE
SYNTAX INTEGER {off(0), on(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “PWM mode current state”
 ::= { status 10 }

pwmModeActiveTimeRemaining OBJECT-TYPE
SYNTAX INTEGER (0..60)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “PWM mode time remaining in on state”
 ::= { status 11 }

alarms OBJECT IDENTIFIER ::= { measurements 5 }

lowPressureAlarmState OBJECT-TYPE
SYNTAX INTEGER {inactive(0), active(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Low pressure alarm state”
 ::= { alarms 1 }

highPressureAlarmState OBJECT-TYPE
SYNTAX INTEGER {inactive(0), active(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “High pressure alarm state”
 ::= { alarms 2 }

compressorRuntimeAlarmState OBJECT-TYPE
SYNTAX INTEGER {inactive(0), active(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Compressor runtime alarm state”
 ::= { alarms 3 }

humidityAlarmState OBJECT-TYPE
SYNTAX INTEGER {inactive(0), active(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Humidity alarm state”
 ::= { alarms 4 }

testAlarmState OBJECT-TYPE
SYNTAX INTEGER {inactive(0), active(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Test alarm state”
 ::= { alarms 5 }

testmode OBJECT IDENTIFIER ::= { measurements 6 }

testmodeActive OBJECT-TYPE
SYNTAX INTEGER {inactive(0), active(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Indicates whether or not the device is in test mode”
 ::= { testmode 1 }

analogInputVoltage OBJECT-TYPE
SYNTAX INTEGER (0..10000)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Analog input voltage in mV”
 ::= { testmode 2 }

relayHeater1Position OBJECT-TYPE
SYNTAX INTEGER {open(0), closed(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 3 }

relayHeater2Position OBJECT-TYPE
SYNTAX INTEGER {open(0), closed(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 4 }

relayPump1Position OBJECT-TYPE
SYNTAX INTEGER {open(0), closed(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 5 }

relayPump2Position OBJECT-TYPE
SYNTAX INTEGER {open(0), closed(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 6 }

valveY1OutputSignal OBJECT-TYPE
SYNTAX INTEGER {off(0), on(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 7 }

valveY2OutputSignal OBJECT-TYPE
SYNTAX INTEGER {off(0), on(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 8 }

valveY3OutputSignal OBJECT-TYPE
SYNTAX INTEGER {off(0), on(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 9 }

valveY4OutputSignal OBJECT-TYPE
SYNTAX INTEGER {off(0), on(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 10 }

relayAlarmPosition OBJECT-TYPE
SYNTAX INTEGER {open(0), closed(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Position of the relay”
 ::= { testmode 11 }

configuration OBJECT IDENTIFIER ::= { measurements 7 }

deviceConfiguration OBJECT-TYPE

SYNTAX INTEGER {onePump(1), twoPumps(2)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Device hardware configuration”
::= { configuration 1 }

pressureSensorRange OBJECT-TYPE
SYNTAX INTEGER (1..150)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Pressure sensor range in PSI”
::= { configuration 2 }

pressureSensorCalibration OBJECT-TYPE
SYNTAX INTEGER (0..2000)
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Pressure sensor calibration value”
::= { configuration 3 }

analogSensorInputEnabled OBJECT-TYPE
SYNTAX INTEGER {disabled(0), enabled(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Analog sensor input is enabled”
::= { configuration 4 }

analogSensorConnectionType OBJECT-TYPE
SYNTAX INTEGER {i2C(0), analogIn(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Select the analog sensor input”
::= { configuration 5 }

analogSensorUnits OBJECT-TYPE
SYNTAX INTEGER {rH(0), dewpoint(1)}
ACCESS read-only
STATUS mandatory
DESCRIPTION
 “Analog sensor unit type”
::= { configuration 6 }

remotePressureSensorEnabled OBJECT-TYPE
SYNTAX INTEGER {disabled(0), enabled(1)}
ACCESS read-only
STATUS mandatory

DESCRIPTION

“The remote pressure sensor is enabled”

::= { configuration 7 }

humiditySensorZeroVoltage OBJECT-TYPE

SYNTAX INTEGER {0..100}

ACCESS read-only

STATUS mandatory

DESCRIPTION

“Set the output voltage level of the analog humidity sensor at 0% RH”

::= { configuration 8 }

humiditySensorMaxVoltage OBJECT-TYPE

SYNTAX INTEGER {0..100}

ACCESS read-only

STATUS mandatory

DESCRIPTION

“Set the output voltage level of the analog humidity sensor at 100% RH”

::= { configuration 9 }

pwmModeEnabled OBJECT-TYPE

SYNTAX INTEGER {disabled(0), enabled(1)}

ACCESS read-only

STATUS mandatory

DESCRIPTION

“Enable the PWM mode with forced dutycycle”

::= { configuration 10 }

pwmModePeriod OBJECT-TYPE

SYNTAX INTEGER {0..60}

ACCESS read-only

STATUS mandatory

DESCRIPTION

“Set the length of each PWM cycle period in minutes”

::= { configuration 11 }

pwmModePercentave OBJECT-TYPE

SYNTAX INTEGER {0..100}

ACCESS read-only

STATUS mandatory

DESCRIPTION

“Set the percentage of the PWM cycle period that should be active”

::= { configuration 12 }

```
-- *****  
-- .1.3.6.1.4.1.26381.1.2.X.port  
-- Configurable parameters  
-- *****
```

setup OBJECT IDENTIFIER ::= { settings 4 }

operationLowPressureThreshold OBJECT-TYPE

SYNTAX INTEGER (1..6500)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Indicates whether or not the device is in test mode”
::= { setup 1 }

operationHighPressureThreshold OBJECT-TYPE
SYNTAX INTEGER (5..7000)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Analog input voltage in mV”
::= { setup 2 }

remoteSensorSwitch OBJECT-TYPE
SYNTAX INTEGER {off(0), on(1)}
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Analog input voltage in mV”
::= { setup 3 }

alarmconfig OBJECT IDENTIFIER ::= { settings 5 }

alarmDelay OBJECT-TYPE
SYNTAX INTEGER (1..900)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Alarm activation delay in seconds”
::= { alarmconfig 1 }

lowPressureLevel OBJECT-TYPE
SYNTAX INTEGER (1..7000)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Low pressure alarm threshold in mBarg”
::= { alarmconfig 2 }

highPressureLevel OBJECT-TYPE
SYNTAX INTEGER (1..7000)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “High pressure alarm threshold in mBarg”
::= { alarmconfig 3 }

pressureAlarmHysteresis OBJECT-TYPE
SYNTAX INTEGER (5..250)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Pressure alarm hysteresis in mBarg”
::= { alarmconfig 4 }

compressorMaxRuntime OBJECT-TYPE
SYNTAX INTEGER (0..60)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “An alarm is triggered when the compressor runs for more then set time in minutes”
::= { alarmconfig 5 }

humidityAlarmLevel OBJECT-TYPE
SYNTAX INTEGER (5..100)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Maximum humidity alarm threshold percentage”
::= { alarmconfig 6 }

datetime OBJECT IDENTIFIER ::= { settings 8 }

time OBJECT-TYPE
SYNTAX INTEGER (0..1439)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Time in minutes”
::= { datetime 1 }

date OBJECT-TYPE
SYNTAX INTEGER (101..1231)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Date in xx-yy where xx = month (1-12) and yy = day of month (1-31)”
::= { datetime 2 }

year OBJECT-TYPE
SYNTAX INTEGER (2000..2099)
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Year”
::= { datetime 3 }

ethernetsetup OBJECT IDENTIFIER ::= { settings 9 }

dHCPEEnabled OBJECT-TYPE
SYNTAX INTEGER {disabled(0), enabled(1)}
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “DHCP Enabled”
 ::= { ethernetsetup 1 }

staticIP OBJECT-TYPE
SYNTAX IpAddress
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Static IP address”
 ::= { ethernetsetup 2 }

staticNetMask OBJECT-TYPE
SYNTAX IpAddress
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Static netmask”
 ::= { ethernetsetup 3 }

staticGateway OBJECT-TYPE
SYNTAX IpAddress
ACCESS read-write
STATUS mandatory
DESCRIPTION
 “Static gateway”
 ::= { ethernetsetup 4 }

```
-- *****  
-- .1.3.6.1.4.1.26381.1.3.X  
-- traps  
-- *****
```

lowPressureAlarm TRAP-TYPE
ENTERPRISE traps
DESCRIPTION
 “Low pressure alarm”
 ::=1

highPressureAlarm TRAP-TYPE
ENTERPRISE traps
DESCRIPTION "High pressure alarm"
::=2

compressorRuntimeAlarm TRAP-TYPE
ENTERPRISE traps
DESCRIPTION "Compressor maximum runtime exceeded"
::=3

relativeHumidityAlarm TRAP-TYPE
ENTERPRISE traps
DESCRIPTION "Relative humidity has exceeded the threshold"
::=4

testAlarm TRAP-TYPE
ENTERPRISE traps
DESCRIPTION "Performing an alarm relay test. The alarm will be cleared within 30 seconds"
::=5

END

7. Trouble shooting

Fault	Cause	Action
Air Dryer does not run	Unit disconnected from the power supply	Check and remedy if necessary
	Power switch in off position	
	Main power connection unreliable	
	The main fuse is defective	
	The fuse of the unit is defective	

Fault	Cause	Action
Pressure too low	Air leakage in the connections between air dryer and system	Check and remedy if necessary
	System leakage too large	
	Pressure settings incorrect	
	Remote sense activated, but not connected	
	Air leakage between pump manifold block	
	One of the pumps is defect	
	Pressure transducer defect	


Fault	Cause	Action
Air Dryer switches on/off very frequently, approx. 20 times/ min. (so called "Hunting")	Hose diameter too small related to hose length (>10 meter). Air resistance too high.	Use a larger hose diameter
	Air resistance caused by nipple inside diameter	Use nipples with larger inside diameter
	System leakage too large	Reduce the system air leakage
	Remote sense activated, but not connected	Deactivate remote sense
	Operational pressure range too small	Increase the operational pressure range by adjusting the high and/or low pressure settings

Fault	Cause	Action
Display shows; 'eth. Not avail'	The physical link between air dryer and network is missing.	Network cable not connected to air dryer
		Not connected to network (via switch or router)

Page left blank intentionally for 2 sided printing purposes


Page left blank intentionally for 2 sided printing purposes

9. Process & Instrumentation diagram

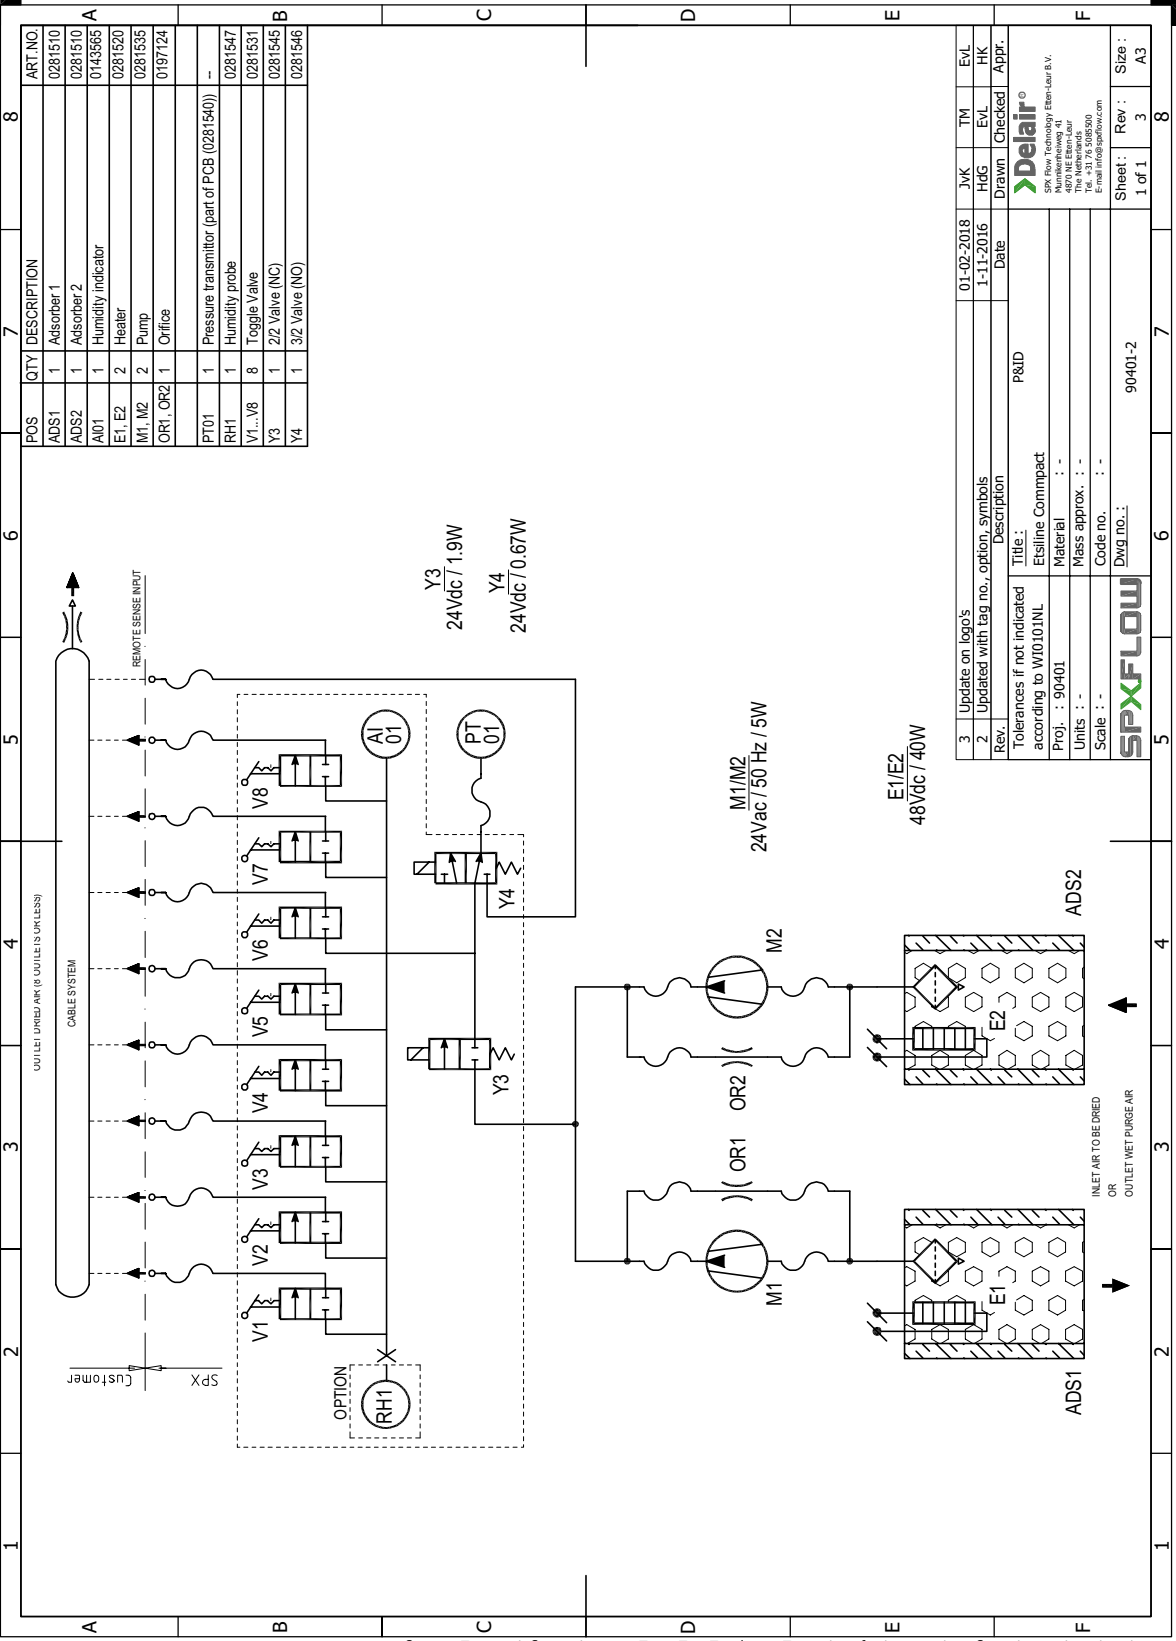

Page left blank intentionally for 2 sided printing purposes

10. Electrical control plan

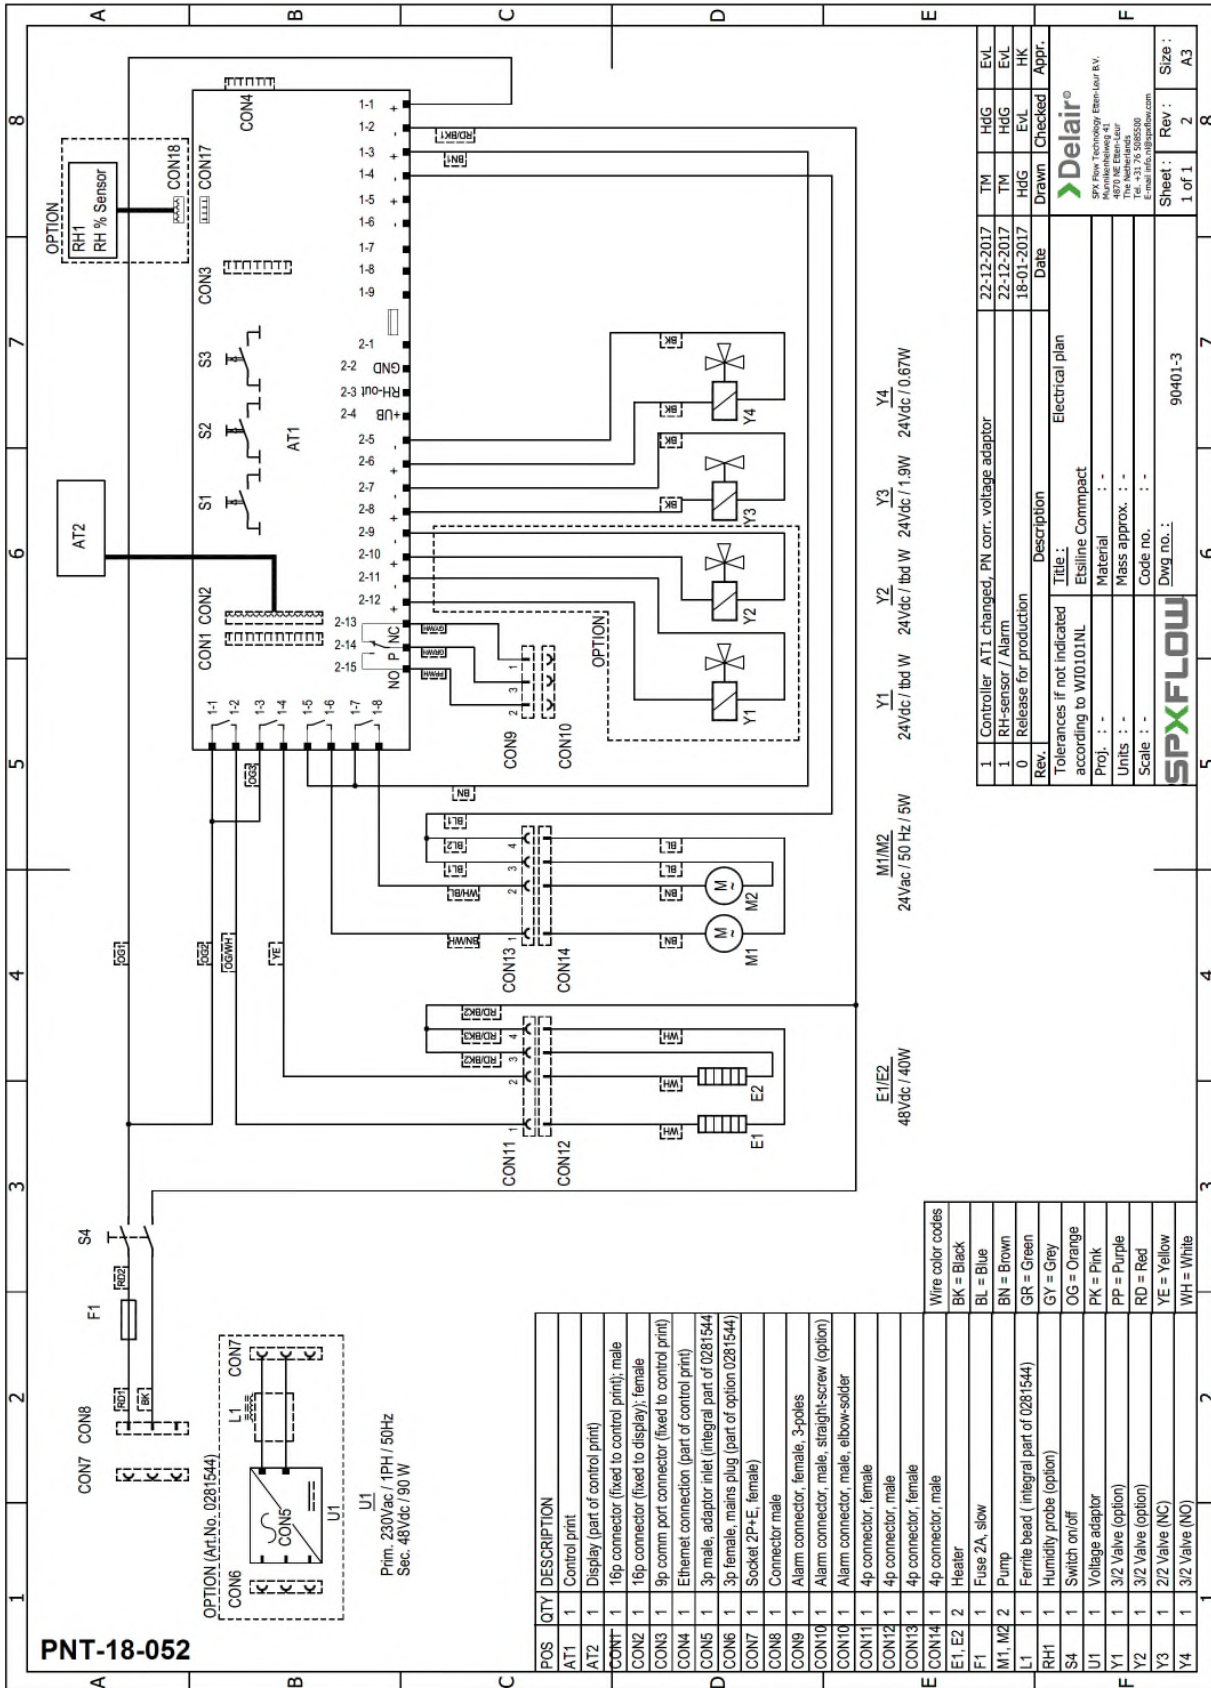

POS	QTY	DESCRIPTION
AT1	1	Control print
AT2	1	Display (part of control print)
CON1	1	16p connector (fixed to control print); male
CON2	1	16p connector (fixed to display); female
CON3	1	9p comm port connector (fixed to control print)
CON4	1	Ethernet connection (part of control print)
CON5	1	3p male, adaptor inlet (integral part of 0281544)
CON6	1	3p female, mains plug (part of option 0281544)
CON7	1	Socket 2P+E, female
CON8	1	Connector male
CON9	1	Alarm connector, female, 3-poles
CON10	1	Alarm connector, male, straight-screw (option)
CON11	1	4p connector, female
CON12	1	4p connector, male
CON13	1	4p connector, female
CON14	1	4p connector, male

Wire color codes

BK	= Black
BL	= Blue
BN	= Brown
GR	= Green
GY	= Grey
OG	= Orange
PK	= Pink
PP	= Purple
RD	= Red
YE	= Yellow
WH	= White

Rev.	Description	Date	Drawn	Checked	Appr.
1	Controller, AT1 changed, PN corr., voltage adaptor	22-12-2017	TM	HdG	EVL
1	RH-sensor / Alarm	22-12-2017	TM	HdG	EVL
0	Release for production	18-01-2017	HdG	EVL	HK

Tolerances if not indicated according to W10101/NL

Title: Electrical plan

Proj.: - -

Material: - -

Units: - -

Mass approx.: - -

Scale: - -

Code no.: - -

Dwg no.: 90401-3

Sheet: 1 of 1

Rev: 2

Size: A3



9FX Flow Technology Etsilne-Lour B.V.
Munsterweg 41
3811 XG Amstelveen
The Netherlands
Tel. +31 76 586550
Email: info@etsilne.com



Page left blank intentionally for 2 sided printing purposes

11. MSDS-SHEETS

Number	Name
Cobalt II chloride.pdf	Safety Data Sheet Coblat Chloride Solution

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 1 of 7

Cobalt Chloride Solution, 0.1M

SECTION 1 : Identification of the substance/mixture and of the supplier

Product name : Cobalt Chloride Solution, 0.1M

Manufacturer/Supplier Trade name:

Manufacturer/Supplier Article number: S25851

Recommended uses of the product and uses restrictions on use:

Manufacturer Details:

AquaPhoenix Scientific
9 Barnhart Drive, Hanover, PA 17331

Supplier Details:

Fisher Science Education
15 Jet View Drive, Rochester, NY 14624

Emergency telephone number:

Fisher Science Education Emergency Telephone No.: 800-535-5053

SECTION 2 : Hazards identification

Classification of the substance or mixture:



Irritant

Skin sensitization, category 1
Respiratory sensitization, category 1



Health hazard

Germ cell mutagenicity, category 2
Carcinogenicity, category 1B
Reproductive toxicity, category 1B



Environmentally Damaging

Chronic hazards to the aquatic environment, category 2

Skin Sens. 1 H317
Resp. Sens. 1 H334
Muta. 2 H341
Carc. 1B H350
Repr. 1B H360
Aquatic Acute 2 H401
Aquatic Chronic 2 H411

Signal word : Danger

Hazard statements:

Harmful if swallowed
May cause an allergic skin reaction
May cause allergy or asthma symptoms or breathing difficulties if inhaled
Suspected of causing genetic defects
May cause cancer
May damage fertility or the unborn child
Toxic to aquatic life with long lasting effects

Created by Global Safety Management, Inc. -Tel: 1-813-435-5161 - www.gsmsds.com

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 2 of 7

Cobalt Chloride Solution, 0.1M

Precautionary statements:

If medical advice is needed, have product container or label at hand
Keep out of reach of children
Read label before use
Obtain special instructions before use
Avoid release to the environment
Do not handle until all safety precautions have been read and understood
Contaminated work clothing should not be allowed out of the workplace
Wear protective gloves/protective clothing/eye protection/face protection
Use personal protective equipment as required
In case of inadequate ventilation wear respiratory protection
If experiencing respiratory symptoms: Call a POISON CENTER or doctor/physician
If exposed or concerned: Get medical advice/attention
Collect spillage
IF ON SKIN: Wash with soap and water
If skin irritation or a rash occurs: Get medical advice/attention
Specific treatment (see supplemental first aid instructions on this label)
Wash contaminated clothing before reuse
IF INHALED: If breathing is difficult, remove victim to fresh air and keep at rest in a position comfortable for breathing
Store locked up
Dispose of contents and container to an approved waste disposal plant

Other Non-GHS Classification:

WHMIS



NFPA/HMIS



NFPA SCALE (0-4)

Health	2
Flammability	0
Physical Hazard	0
Personal Protection	X

HMIS RATINGS (0-4)

SECTION 3 : Composition/Information on ingredients

Ingredients:		
CAS 7791-13-1	Cobalt (II) chloride, hexahydrate	2.38 %
CAS 7732-18-5	Delonized Water	97.62 %

Created by Global Safety Management, Inc. -Tel: 1-813-435-5161 - www.gsmsds.com

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 3 of 7

Cobalt Chloride Solution, 0.1M

Percentages are by weight

SECTION 4 : First aid measures

Description of first aid measures

After inhalation: Move exposed to fresh air. Give artificial respiration if necessary. If breathing is difficult give oxygen. Loosen clothing and place exposed in a comfortable position. Seek medical assistance if cough or other symptoms appear.

After skin contact: Wash hands and exposed skin with soap and plenty of water. Seek medical attention if irritation persists or if concerned.

After eye contact: Protect unexposed eye. Flush exposed eye gently using water for 15-20 minutes. Remove contact lenses while rinsing. Seek medical attention if irritation persists or concerned.

After swallowing: Rinse mouth with water. Do not induce vomiting. Never give anything by mouth to an unconscious person. Seek medical attention if irritation, discomfort, or vomiting persists.

Most important symptoms and effects, both acute and delayed:

Irritation. Shortness of breath. Headache. Nausea. Dizziness.;

Indication of any immediate medical attention and special treatment needed:

If seeking medical attention provide SDS document to physician. Physician should treat symptomatically.

SECTION 5 : Firefighting measures

Extinguishing media

Suitable extinguishing agents: Use water, dry chemical, chemical foam, carbon dioxide, or alcohol-resistant foam.

For safety reasons unsuitable extinguishing agents:

Special hazards arising from the substance or mixture:

Irritating and highly toxic gases may be generated by thermal decomposition.

Advice for firefighters:

Protective equipment: Wear protective eyewear, gloves, and clothing. Refer to Section 8.

Additional information (precautions): Avoid inhaling gases, fumes, dust, mist, vapor, and aerosols. Avoid contact with skin, eyes, and clothing.

SECTION 6 : Accidental release measures

Personal precautions, protective equipment and emergency procedures:

Ensure adequate ventilation. Ensure that air-handling systems are operational. Avoid contact with skin, eyes and clothing.

Environmental precautions:

Should not be released into environment. Prevent from reaching drains, sewer, or waterway.

Methods and material for containment and cleaning up:

Wear protective eyewear, gloves, and clothing. Refer to Section 8. Always obey local regulations. If necessary use trained response staff or contractor. Evacuate personnel to safe areas. Containerize for disposal. Refer to Section 13. Keep in suitable closed containers for disposal. Absorb spill with inert material (e.g. vermiculite, sand or earth). Neutralize spill with sodium bicarbonate.

Reference to other sections:

SECTION 7 : Handling and storage

Created by Global Safety Management, Inc. - Tel: 1-813-435-5161 - www.gsmsds.com

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 4 of 7

Cobalt Chloride Solution, 0.1M

Precautions for safe handling:

Avoid contact with skin, eyes, and clothing. Follow good hygiene procedures when handling chemical materials. Refer to Section 8. Follow proper disposal methods. Refer to Section 13. Do not eat, drink, smoke, or use personal products when handling chemical substances.

Conditions for safe storage, including any incompatibilities:

Store in a cool location. Keep away from food and beverages. Protect from freezing and physical damage. Provide ventilation for containers. Keep container tightly sealed. Store away from incompatible materials.

SECTION 8 : Exposure controls/personal protection



Control Parameters:

7791-13-1, Cobalt (II) chloride hexahydrate, ACGIH TLV: 0.02 mg/m³ TWA

Appropriate Engineering controls:

Emergency eye wash fountains and safety showers should be available in the immediate vicinity of use or handling. Provide exhaust ventilation or other engineering controls to keep the airborne concentrations of vapor and mists below the applicable workplace exposure limits (Occupational Exposure Limits-OELs) indicated above.

Respiratory protection:

Not required under normal conditions of use. Where risk assessment shows air-purifying respirators are appropriate use a full-face particle respirator type N100 (US) or type P3 (EN 143) respirator cartridges as a backup to engineering controls. When necessary use NIOSH approved breathing equipment.

Protection of skin:

Select glove material impermeable and resistant to the substance. Select glove material based on rates of diffusion and degradation. Dispose of contaminated gloves after use in accordance with applicable laws and good laboratory practices. Use proper glove removal technique without touching outer surface. Avoid skin contact with used gloves. Wear protective clothing.

Eye protection:

Wear equipment for eye protection tested and approved under appropriate government standards such as NIOSH (US) or EN 166(EU). Safety glasses or goggles are appropriate eye protection.

General hygienic measures:

Perform routine housekeeping. Wash hands before breaks and immediately after handling the product. Avoid contact with skin, eyes, and clothing. Before reusing wash contaminated clothing.

SECTION 9 : Physical and chemical properties

Appearance (physical state,color):	Clear, Pink-Purple Liquid	Explosion limit lower:	Not Determined
		Explosion limit upper:	Not Determined
Odor:	Odorless	Vapor pressure:	Not Determined
Odor threshold:	Not Determined	Vapor density:	Not Determined
pH-value:	Not Determined	Relative density:	Not Determined
Melting/Freezing point:	Not Determined	Solubilities:	Soluble in water
Boiling point/Boiling range:	Not Determined	Partition coefficient (n-octanol/water):	Not Determined

Created by Global Safety Management, Inc. -Tel: 1-613-435-5161 - www.gsmsds.com

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 5 of 7

Cobalt Chloride Solution, 0.1M

Flash point (closed cup):	Not Determined	Auto/Self-ignition temperature:	Not Determined
Evaporation rate:	Not Determined	Decomposition temperature:	Not Determined
Flammability (solid,gaseous):	Non-flammable	Viscosity:	a. Kinematic: Not Determined b. Dynamic: Not Determined
Density: Not Determined			

SECTION 10 : Stability and reactivity

Reactivity: Nonreactive under normal conditions.

Chemical stability: Stable under normal conditions. May decompose if over-heated.

Possible hazardous reactions: None under normal processing.

Conditions to avoid: Incompatible materials. Excess heat.

Incompatible materials: potassium and metal halides. sodium dispersions. t-butyl hydroperoxide. strong mineral acids.

Hazardous decomposition products: Oxides of cobalt.

SECTION 11 : Toxicological information

Acute Toxicity:	
Oral:	LD50 Rat 766 mg/kg 7791-13-1
Dermal:	LD50 Rat >2,000 mg/kg 7791-13-1
Chronic Toxicity: No additional information.	
Corrosion Irritation: No additional information.	
Sensitization:	No additional information.
Single Target Organ (STOT):	No additional information.
Numerical Measures:	No additional information.
Carcinogenicity:	IARC: : Group 2B: Possibly carcinogenic to humans (Cobalt dichloride hexahydrate)
Mutagenicity:	In vitro tests showed mutagenic effects (Cobalt dichloride hexahydrate). Mouse - mammary gland - Mutation in mammalian somatic cells (Cobalt dichloride hexahydrate)
Reproductive Toxicity:	Presumed human reproductive toxicant. Presumed human reproductive toxicant (Cobalt dichloride hexahydrate)

SECTION 12 : Ecological information

Ecotoxicity

7791-13-1: Fish LC50 - Cyprinus carpio (Carp) - 0.33 mg/l - 96.0 h

7791-13-1: invertebrates EC50 - Daphnia magna (Water flea) - 1.1 - 1.6 mg/l - 48 h

Created by Global Safety Management, Inc. -Tel: 1-813-435-5161 - www.gsmsds.com

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 6 of 7

Cobalt Chloride Solution, 0.1M

7791-13-1: algae EC50 - *Chlorella vulgaris* (Fresh water algae) - 0.5 mg/l - 96 h

Persistence and degradability: Not determined.

Bioaccumulative potential: Not determined.

Mobility in soil: Not determined.

Other adverse effects: None identified.

SECTION 13 : Disposal considerations

Waste disposal recommendations:

Contact a licensed professional waste disposal service to dispose of this material. Dispose of empty containers as unused product. Product or containers must not be disposed together with household garbage. It is the responsibility of the waste generator to properly characterize all waste materials according to applicable regulatory entities (US 40CFR262.11). Chemical waste generators must determine whether a discarded chemical is classified as a hazardous waste. Chemical waste generators must also consult local, regional, and national hazardous waste regulations. Ensure complete and accurate classification.

SECTION 14 : Transport information

UN-Number

Not Regulated.

UN proper shipping name

Not Regulated.

Transport hazard class(es)

Packing group: Not Regulated.

Environmental hazard:

Transport in bulk:

Special precautions for user:

SECTION 15 : Regulatory information

United States (USA)

SARA Section 311/312 (Specific toxic chemical listings):

None of the ingredients is listed

SARA Section 313 (Specific toxic chemical listings):

7791-13-1 Cobalt(II) Chloride Hexahydrate (Cobalt Compounds)

RCRA (hazardous waste code):

None of the ingredients is listed

TSCA (Toxic Substances Control Act):

All ingredients are listed.

CERCLA (Comprehensive Environmental Response, Compensation, and Liability Act):

7791-13-1 Cobalt(II) Chloride Hexahydrate (Cobalt Compounds)

Proposition 65 (California):

Chemicals known to cause cancer:

None of the ingredients is listed

Chemicals known to cause reproductive toxicity for females:

None of the ingredients is listed

Created by Global Safety Management, Inc. - Tel: 1-813-435-5161 - www.gsmsds.com

Safety Data Sheet

according to 29CFR1910/1200 and GHS Rev. 3

Effective date : 02.21.2015

Page 7 of 7

Cobalt Chloride Solution, 0.1M

Chemicals known to cause reproductive toxicity for males:

None of the ingredients is listed

Chemicals known to cause developmental toxicity:

None of the ingredients is listed

Canada

Canadian Domestic Substances List (DSL):

All ingredients are listed.

Canadian NPRI Ingredient Disclosure list (limit 0.1%):

None of the ingredients is listed

Canadian NPRI Ingredient Disclosure list (limit 1%):

None of the ingredients is listed

SECTION 16 : Other information

This product has been classified in accordance with hazard criteria of the Controlled Products Regulations and the SDS contains all the information required by the Controlled Products Regulations. Note: . The responsibility to provide a safe workplace remains with the user. The user should consider the health hazards and safety information contained herein as a guide and should take those precautions required in an individual operation to instruct employees and develop work practice procedures for a safe work environment. The information contained herein is, to the best of our knowledge and belief, accurate. However, since the conditions of handling and use are beyond our control, we make no guarantee of results, and assume no liability for damages incurred by the use of this material. It is the responsibility of the user to comply with all applicable laws and regulations applicable to this material.

GHS Full Text Phrases:

Abbreviations and acronyms:

Effective date : 02.21.2015

Last updated : 03.19.2015

12. Declaration of conformity

EC declaration of conformity

(Directive 2014/30/EC, Annex IV)

With EC directives

2014/30/EU **EMC Directive**
2012/19/EU **Directive on waste electrical and electronic equipment (WEEE)**

we,

SPX Flow Technology BV
Munnikenheiweg 41
4879 NE Etten-Leur
The Netherlands

declare that, under our sole responsibility for manufacture and supply, the products

EtsilineCommPact


SPX No. 0281400, 0281401, 0281402 & 0281403

to which this declaration relates, is (are) in conformity with the provisions of the above directive using the following principal standards

EN ISO 12100:12100
EN 61000-3-2:2014
EN 61000-6-1:2007
EN 61000-6-2:2005
EN 61000-6-3:2007
EN 61000-6-4:2007
NEN-EN-ISO 13857:2008

Issued at Etten-Leur on 04/04/2017 by

Kevin O'Keeffe, General Manager

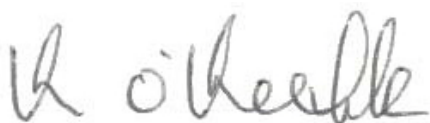

Page left blank intentionally for 2 sided printing purposes

13. Helpline

Phone **+31 76 5085568**

Fax **+31 76 5085590**

E-mail **info.nl@spxflow.com**

Web **www.spxflow.com**

SPXFLOW

AIR DRYER Delair® Etsi- lineCommPact

AIR DRYER Delair SPX Flow Technology B.V.

Munnikenheiweg 41
4879NE - Etten-Leur
The Netherlands
Phone: +31 (0)76-508 5568
Fax: +31 (0)76-508 5590
E-mail: info.nl@spxflow.com
www.spxflow.com

This publication is the property of, and contains information proprietary to SPX Corporation. No part of this publication may be reproduced or copied in any form, or by any means, including electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of SPX Corporation. All product, brand, or trade names used in this publication are the trademarks or registered trademarks of their respective owners. Information in this manual is subject to change without notice.

Copyright ©2018 SPX Corporation

